
# Coniq single lever



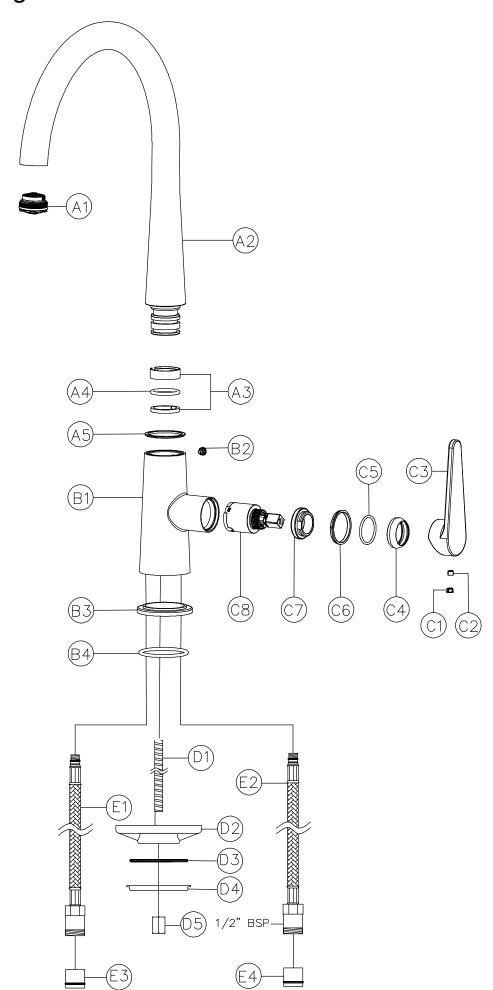

# Coniq single lever



#### **General Advice:**

- These instructions are intended as a guide only, if you are in any doubt, you should seek the advice
  of a qualified professional.
- Take care not to mark finished parts with screwdrivers or other tools.
- Use a pair of rubber gloves to get a better grip on decorative hand tight parts.
- Ensure all parts are reassembled tightly.
- After maintenance test that all assemblies are watertight and function correctly.
- Always isolate the hot and cold-water supplies before starting any maintenance, once isolated you should drain any residual water from your system.

### To replace the valve:

- 1. Remove cover (C1) with a small precision screwdriver to expose grub screw (C2).
- 2. Unscrew grub screw (C2) in an anticlockwise direction using a 2.5mm A/F allen key.
- 3. Pull handle (C3) away from tap body (B1).
- 4. Remove shroud (C4) which should contain O ring (C5)
- 5. Pull out indices ring (C6), note blue is at the top.
- 6. Remove retaining nut (C7) in an anticlockwise direction using an adjustable spanner.
- 7. Remove valve (C8) and replace with the new one and assemble in reverse order.

## **Important Note:**

Ensure the locating lugs on the back of valve (C8) align with the holes inside the tap body (B1) when reassembling.

#### To replace the spout o-rings:

- 1. Remove the grub screw (B2) on the back of body (B1) using a 2.5mm A/F allen key.
- 2. Pull the spout (A2) vertically away from the tap body (B1).
- 3. Remove O-rings (A4) using a precision screwdriver.
- 4. Clean the spout base (A4) with a soft wet cloth.
- 5. Replace the O-rings (A4).
- 6. Typically, the PTFE rings (A3 & A5) do not wear, replace if necessary.
- 7. Reassemble the tap in reverse order.

**Important Note:** Top PTFE ring (A3) has a gap; this needs to be aligned with grub screw (B2) during reassembly.

#### To clean the aerator:

- 1. Hold the spout (A2) firmly.
- 2. Unscrew the aerator housing (A1) by hand using a coin.
- 3. Clean the aerator (A2).
- 4. Reassemble the tap in the reverse order.