

Decadence Monobloc



General Advice:

- These instructions are intended as a guide only, if you are in any doubt you should seek the advice of a qualified professional.
- Take care not to mark finished parts with screwdrivers or other tools.
- Use a pair of rubber gloves to get a better grip on decorative hand tight parts.
- Ensure all parts are reassembled tightly.
- After maintenance test that all assemblies are water tight and function correctly.
- Always isolate the hot and cold water supplies before starting any maintenance, once isolated you should drain any residual water from your system.

To replace the hot valve:

- 1. Loosen grub screw (C2) on the underside of handle (C1) using a 2mm A/F allen key.
- 2. Pull the handle (C1) horizontally away from the tap.
- 3. Unscrew grub screw (C4) from (C3) using a 2mm A/F allen key
- 4. Pull the handle alignment component (C3) horizontally away from the valve.
- 5. Hold the body of the tap (B1) firmly. Using an adjustable or 12mm open spanner unscrew and remove the valve (C5)
- 6. Clean the Inside of chamber (B1) with a soft wet cloth.
- 7. Reassemble the tap in the reverse order.

To replace the spout o-rings:

- 1. Loosen grub screw (B2) on the rear of body (B1) using 3mm A/F allen key.
- 1. Pull the spout (A4) vertically away from the body (B1).
- 2. Remove the old o-rings (A6 & A7) using a small screwdriver or similar.
- 3. If worn, remove the white PTFE spacers (A5 & A8).
- 4. Ensure the inside of the body (B1) and the spout base is clean of dirt and grit with a soft wet cloth.
- 5. If required locate the new white PTFE spacers (A5 & A8).
- 6. Carefully locate the new O-rings (A6 & A7) onto the spout base (A4).
- 7. Grease the O-rings thoroughly with silicone or alternative similar grease.
- 8. Reassemble the tap in the reverse order.