


Hesta Pull Out

abode

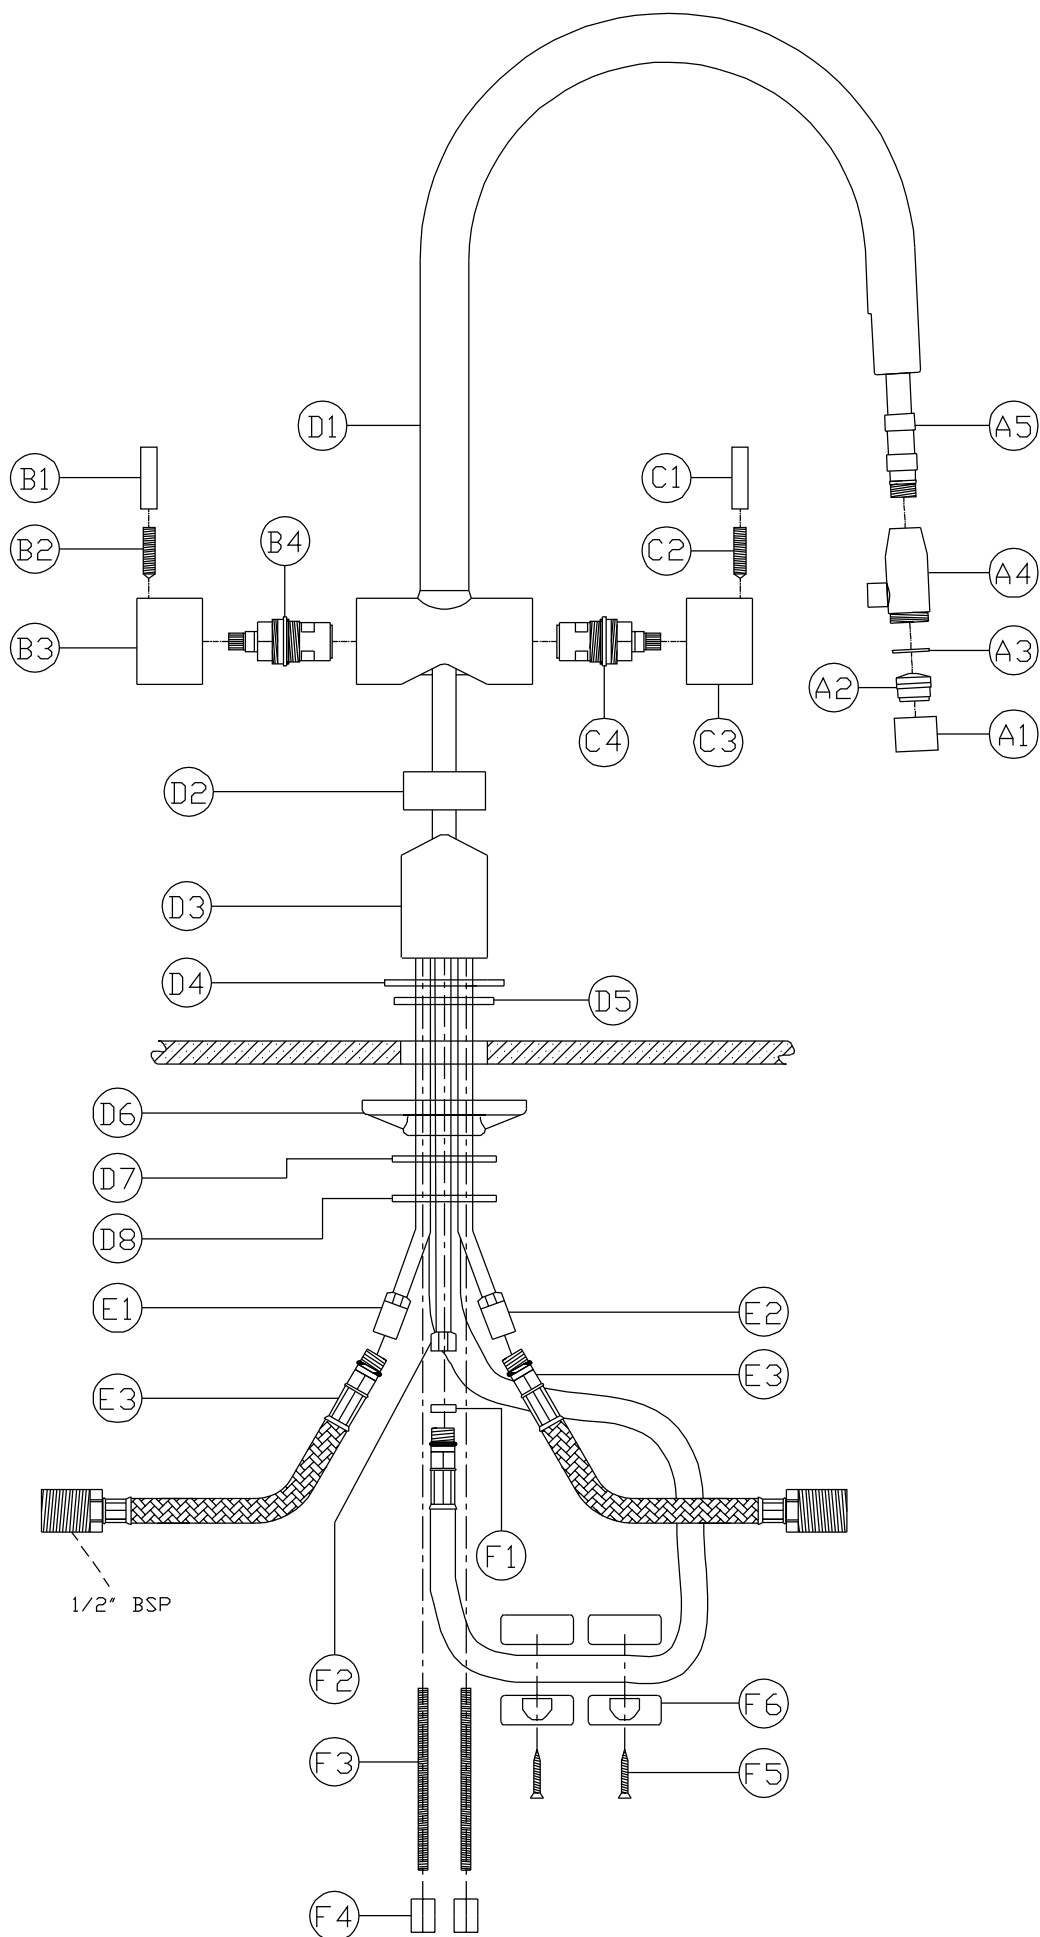

Hesta Pull Out

abode

General Advice:

- These instructions are intended as a guide only, if you are in any doubt you should seek the advice of a qualified professional.
- Take care not to mark finished parts with screwdrivers or other tools.
- Use a pair of rubber gloves to get a better grip on decorative hand tight parts.
- Ensure all parts are reassembled tightly.
- After maintenance test that all assemblies are water tight and function correctly.
- Always isolate the hot and cold water supplies before starting any maintenance, once isolated you should drain any residual water from your system.

To replace the hot valve:

1. Unscrew lever (B1) by hand vertically away from handle (B3).
2. Unscrew grub screw (B2) on the top of handle (B3) using a 3.0mm A/F allen key.
3. Pull the handle (B3) horizontally away from the spout body (D1).
4. Hold the body of tap (D1) firmly. Using an adjustable spanner or 17mm ring spanner, unscrew the valve (B4).
5. Clean the Inside of chamber (D1) with a soft wet cloth.
6. Reassemble the tap in the reverse order replacing valve (B4).

To replace the hose:

1. Unscrew black spout head (A4) from hose (A5) by hand.
2. Replace the hose (A5) by passing it through the spout (D1).
3. Disconnect hose (A5) from outlet pipe (F2).
4. Reassemble the tap in the reverse order replacing the hose (D1). Ensure to replace rubber washer (F1).