


# Ignus single lever

abode

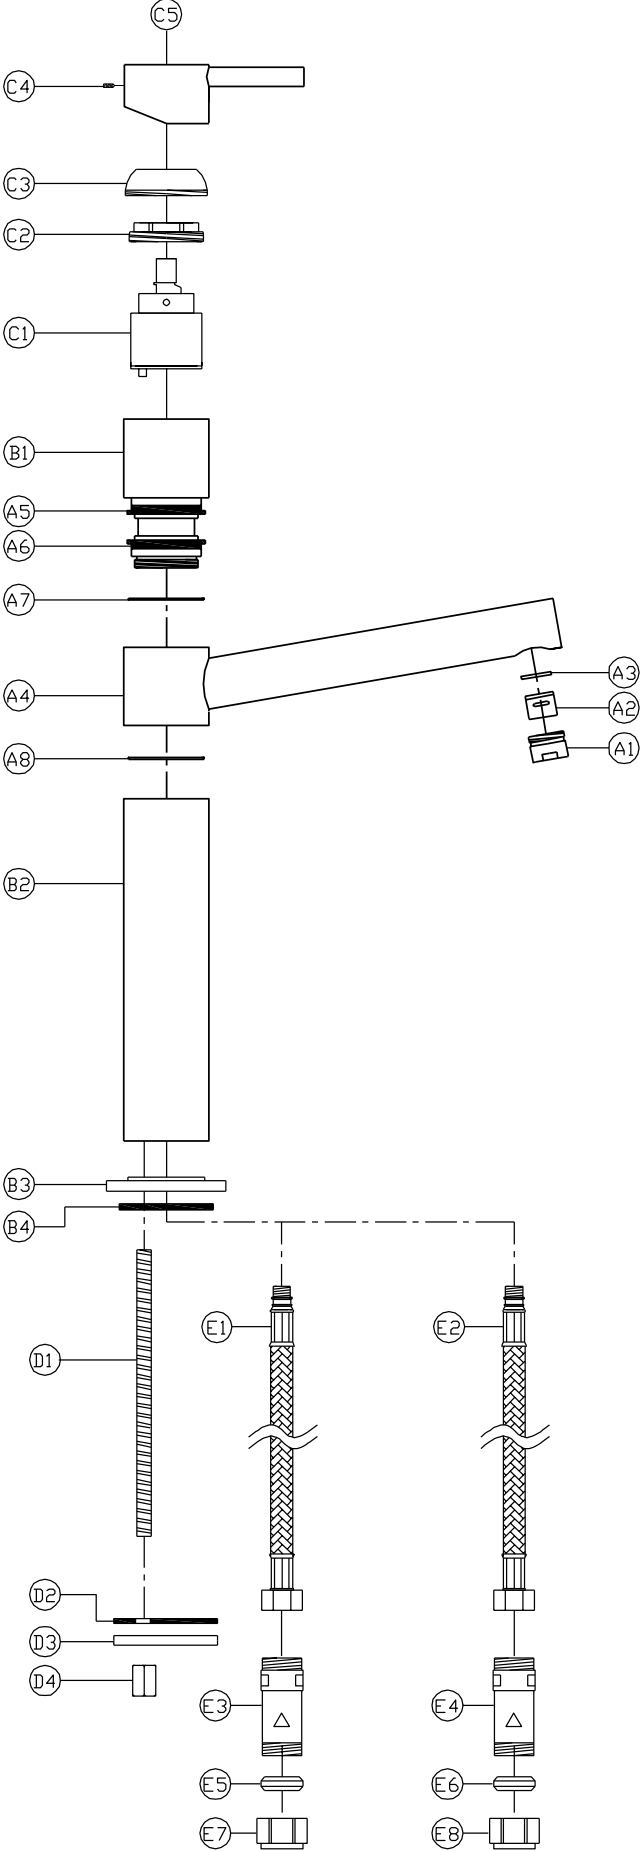

# Ignus single lever

abode

## General Advice:

- These instructions are intended as a guide only, if you are in any doubt you should seek the advice of a qualified professional.
- Take care not to mark finished parts with screwdrivers or other tools.
- Use a pair of rubber gloves to get a better grip on decorative hand tight parts.
- Ensure all parts are reassembled tightly.
- After maintenance test that all assemblies are water tight and function correctly.
- Always isolate the hot and cold water supplies before starting any maintenance, once isolated you should drain any residual water from your system.

## To replace the valve:

1. Loosen grub screw (C4) using a 2.5mm A/F Allen key.
2. Pull the handle (C5) away from the tap body (B1) . if the handle is tight, lever the handle (C5) away using a flat screwdriver between the handle (C5) and valve lock nut cover (C3)
3. Unscrew the valve lock nut cover (C3).
4. Hold the body of the tap (B1) firmly. Using an adjustable spanner or socket unscrew the valve lock nut (C2).
5. Pull the old valve cartridge (C1) away from the tap.
6. Ensure that the valve chamber (B1) is clean of dirt and grit.
7. Place the new valve (C1) in the chamber (B1), ensuring the locators on the base of valve (C1) align with the recesses in the chamber of the tap (B1).
8. Reassemble the tap in the reverse order.

Note on earlier versions of this tap parts (C2 & C3) were combined as a one part decorative lock nut.

## To replace the spout o-rings:

1. Disconnect tail pipes (E1 & E2) from non return valves (E3 & E4).
2. Unscrew fixing nut (D4) and pull the tap upwards away from the sink or worktop.
3. Whilst firmly holding section (B1) unscrew section (B2).
4. Pull the spout (A4) vertically down away from the body (B1).
5. Remove the old o-rings (A5 & A7) using a small screwdriver or similar.
6. If worn, remove the white PTFE spacers (A7 & A8).
7. Ensure the outside of the body (B1) and the spout inner (A4) is clean of dirt and grit.
8. If required locate the new white PTFE spacer (A7).
9. Carefully locate the new O-rings (A5 & A7) onto the body (B1) as shown.
10. Grease the O-rings (A5 & A7) thoroughly with silicone or alternative similar grease.
11. Push the spout (A4) vertically onto the body (B1).
12. If required locate the new white PTFE spacer (A8).
13. Reassemble the base of the tap (B2) in the reverse order.
14. Refit the tap to the sink or worktop.
15. Reconnect tail pipes (E1 & E2) to non return valves (E3 & E4).