
Pluro Single Lever Pull Out Spray

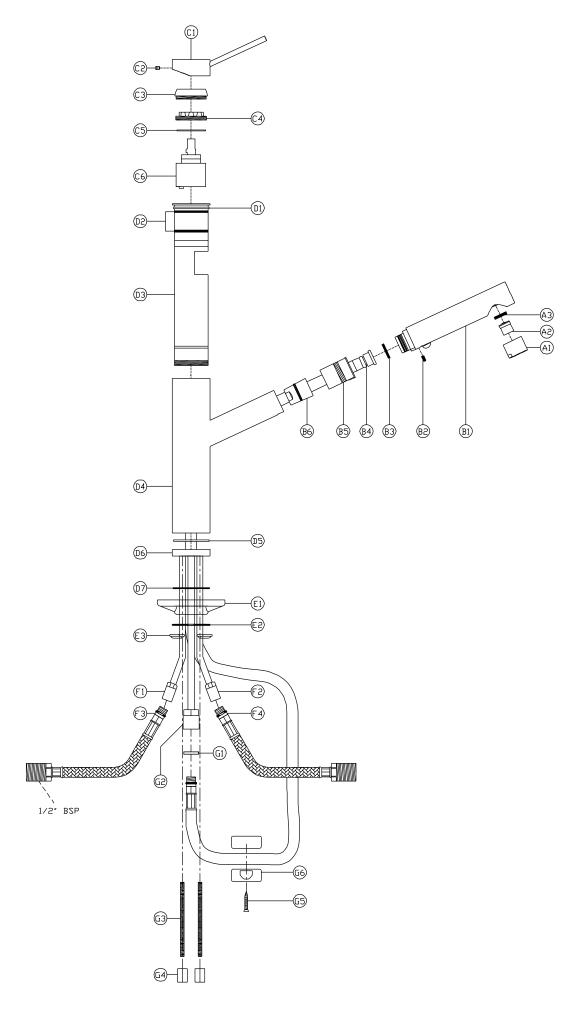



Pluro Single Lever Pull Out Spray



General Advice:

- These instructions are intended as a guide only, if you are in any doubt you should seek the advice of a qualified professional.
- Take care not to mark finished parts with screwdrivers or other tools.
- Use a pair of rubber gloves to get a better grip on decorative hand tight parts.
- Ensure all parts are reassembled tightly.
- After maintenance test that all assemblies are water tight and function correctly.
- Always isolate the hot and cold water supplies before starting any maintenance, once isolated you should drain any residual water from your system.

To replace the hot and cold valve:

- 1. Loosen grub screw (C2) on the side of handle (C1) using a 2.0mm A/F allen key.
- 2. Pull the handle (C1) vertically away from the tap body (D4).
- 3. Unscrew valve cover (C3) by hand vertically away from tap body (D4).
- 4. Hold the body of tap (D4) firmly. Using an adjustable spanner unscrew the valve lock nut (C4).
- 5. Clean the Inside of chamber (D3) with a soft wet cloth.
- 6. Reassemble the tap in the reverse order replacing valve (C6).

To replace the hose:

- 1. Disconnect hose (B4) from outlet adaptor (G2).
- 2. Unscrew hose nut (B5) from spray head (B1) by hand.
- 3. Pull hose (B4) away from tap body (D4) passing hose (B4) through tap body (D4).
- 4. Reassemble the tap in the reverse order replacing the hose (B4). Ensure to replace rubbers washers (B3) and (G1).