


# Sirius Single Lever v1

abode

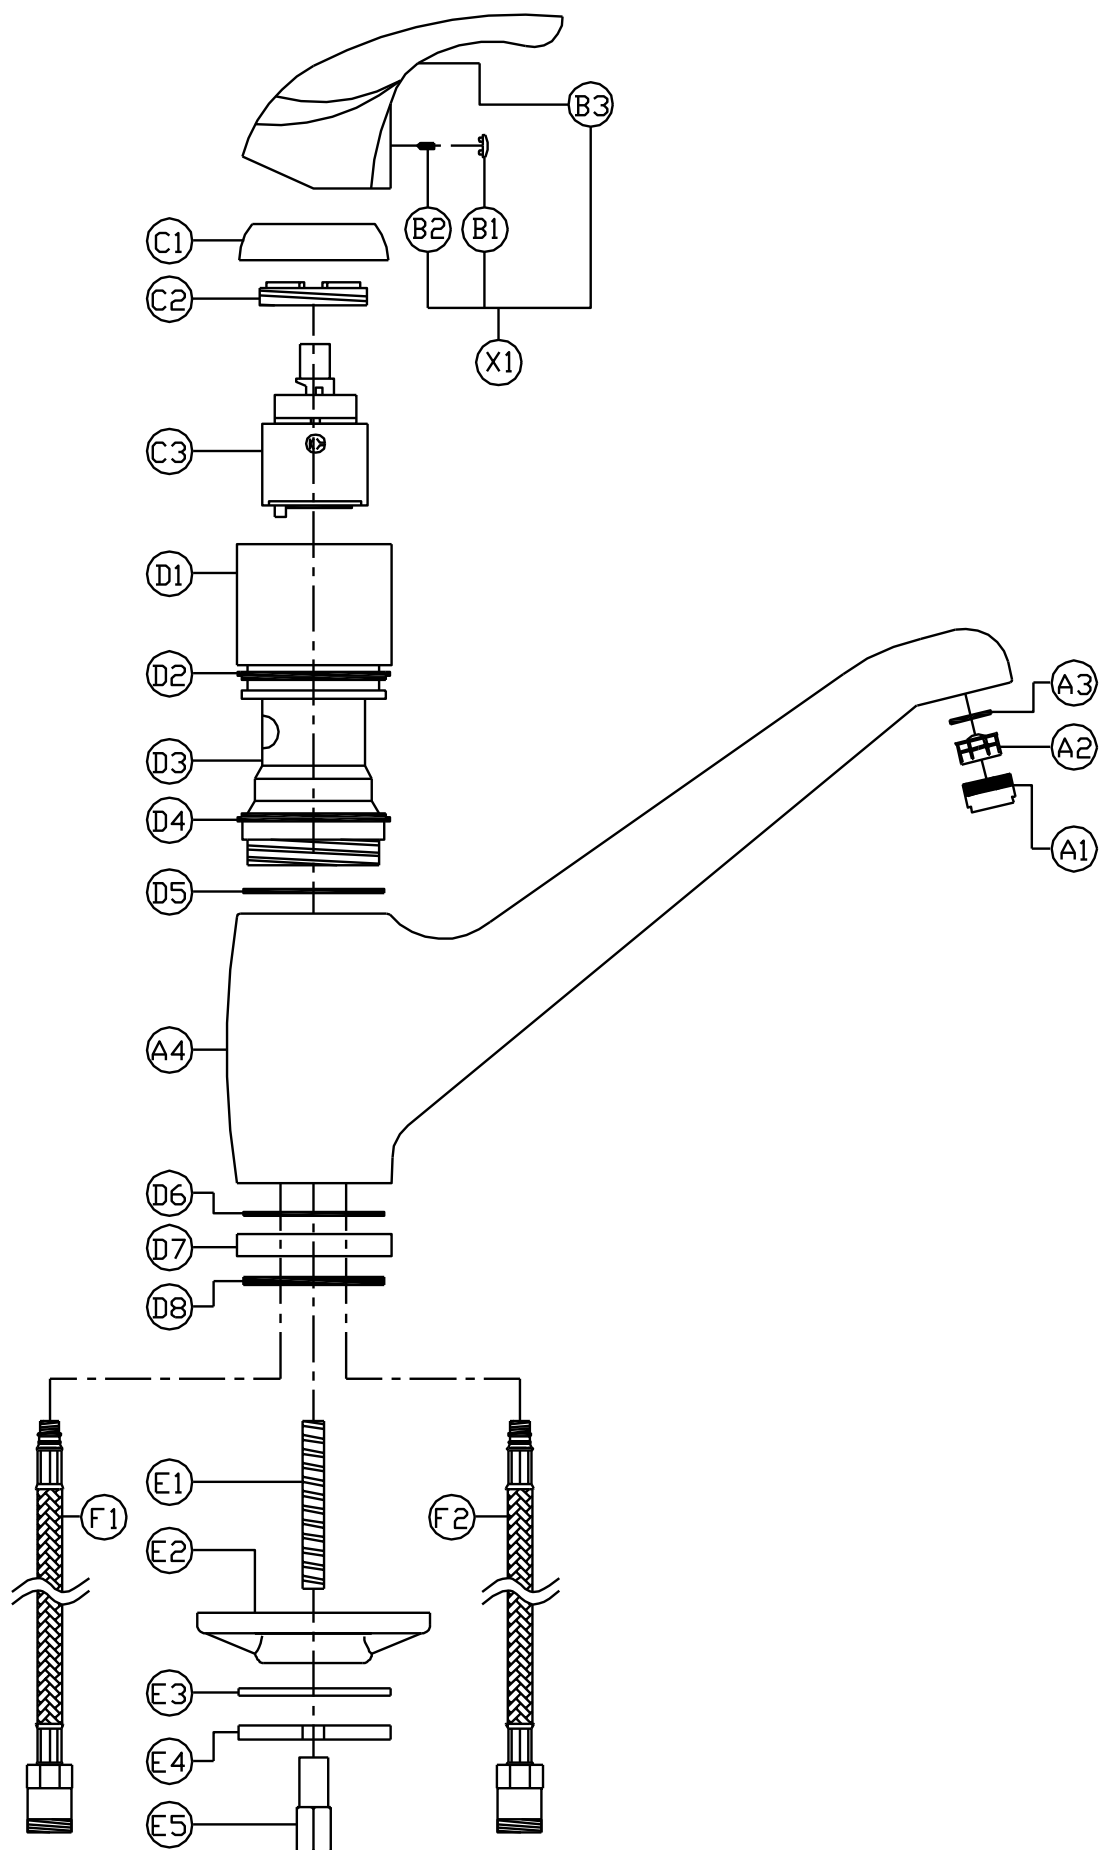

# Sirius Single Lever v1

abode

## General Advice:

- These instructions are intended as a guide only, if you are in any doubt you should seek the advice of a qualified professional.
- Take care not to mark finished parts with screwdrivers or other tools.
- Use a pair of rubber gloves to get a better grip on decorative hand tight parts.
- Ensure all parts are reassembled tightly.
- After maintenance test that all assemblies are water tight and function correctly.
- Always isolate the hot and cold water supplies before starting any maintenance, once isolated you should drain any residual water from your system.

## To replace the valve:


1. Tilt the handle (B3) into the on position.
2. Remove the hot / cold indices (B1) using a thumbnail or small screwdriver.
3. Loosen grub screw (B2) using a 2.5mm A/F Allen key.
4. Pull the handle (B3) vertically away from the tap.
5. Unscrew the decorative cover (C1) by hand.
6. Unscrew the valve lock nut (C2) using a adjustable spanner.
7. Pull the old valve cartridge (C3) away from the tap.
8. Ensure that the valve chamber (D1) is clean of dirt and grit.
9. Place the new valve (C3) in the chamber (D1), ensuring the locators on the base of valve (C3) align with the recesses in the chamber of the tap (D1).
10. Reassemble the tap in the reverse order.

## To replace the spout o-rings:

1. Disconnect the hot and cold water tail pipes (F1 & F2) from the water supplies using a spanner.
2. Remove fixing nut (E5). Then remove parts (E2 - E4).
3. Remove the tap from the sink.
4. Whilst holding the tap at (B3) unscrew the base (D7) by hand.
5. Whilst holding the tap at (A4) push the core of the tap (D1-D3) through the tap upwards.
6. Remove the old O-rings (D2 & D4), take note of the orientation of the O-rings as installed.
7. Ensure the core (D3) and inside of the spout (A4) is clean of dirt and grit.
8. Carefully locate the new O-rings (D2 & D4) onto the body (D3).
9. Grease the O-rings thoroughly with silicone or alternative similar grease.
10. Reassemble the tap in the reverse order; ensure to replace the white spacer rings (D5 & D6) are placed above and below the spout as disassembled.

# Sirius Single Lever

abode

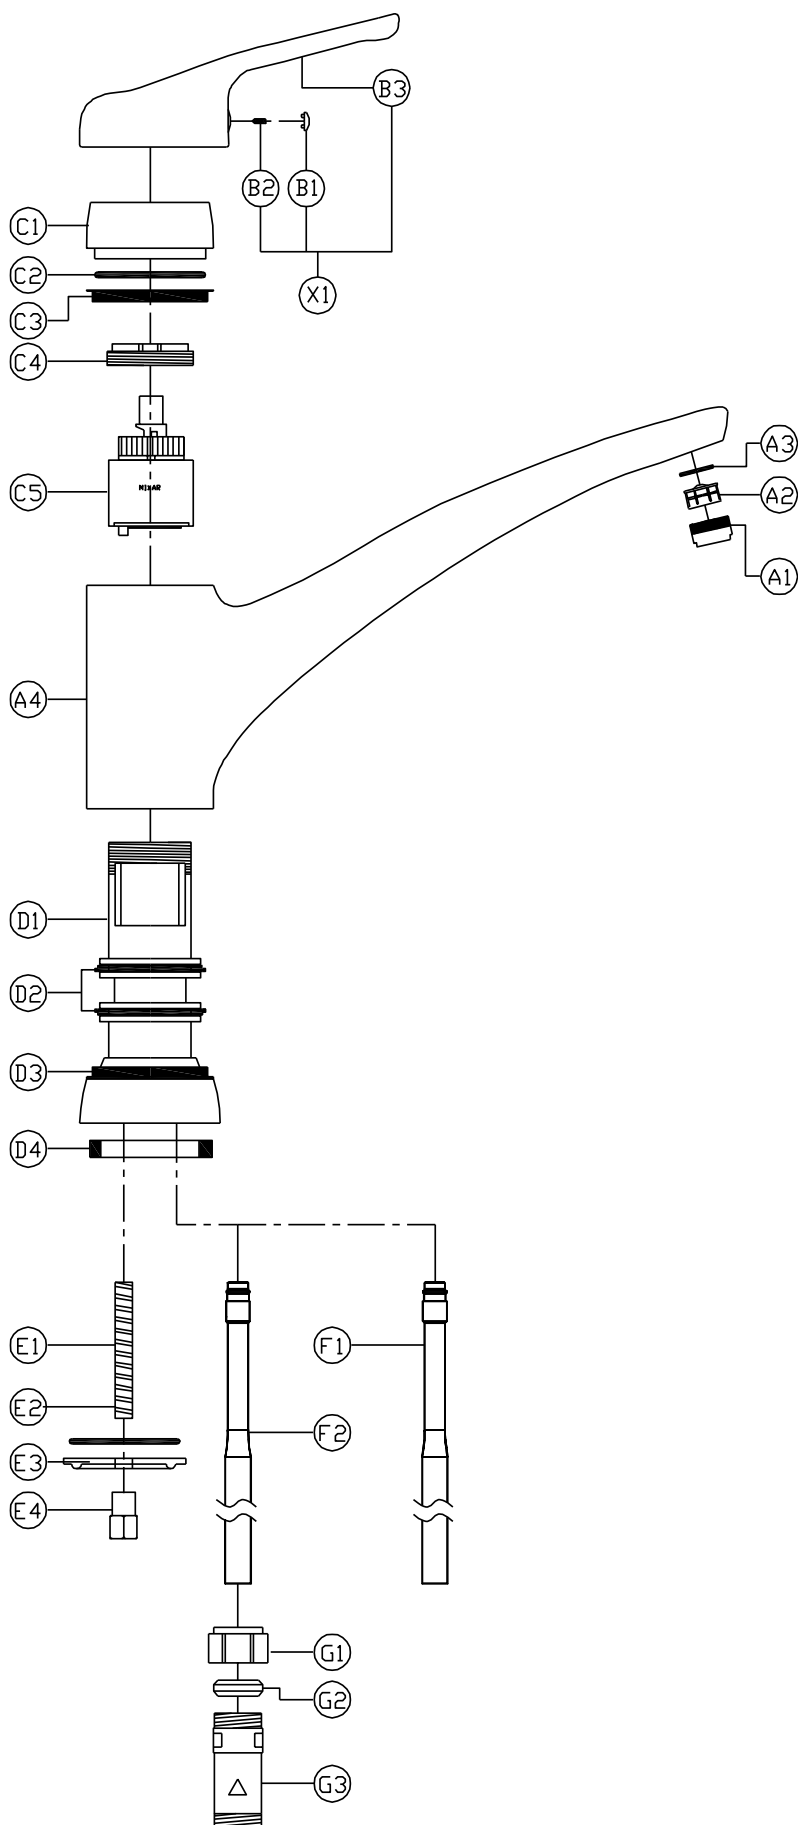

# Sirius Single Lever v2 (2007+)

abode

## General Advice:

- These instructions are intended as a guide only, if you are in any doubt you should seek the advice of a qualified professional.
- Take care not to mark finished parts with screwdrivers or other tools.
- Use a pair of rubber gloves to get a better grip on decorative hand tight parts.
- Ensure all parts are reassembled tightly.
- After maintenance test that all assemblies are water tight and function correctly.
- Always isolate the hot and cold water supplies before starting any maintenance, once isolated you should drain any residual water from your system.

## To replace the valve:

1. Tilt the handle (B3) into the on position.
2. Remove the hot / cold indices (B1) using a thumbnail or small screwdriver.
3. Loosen grub screw (B2) using a 2.5mm A/F Allen key.
4. Pull the handle (B3) vertically away from the tap.
5. Unscrew the decorative cover (C1) whilst holding the base of (D1) or the tap is fixed.
6. Unscrew the valve lock nut (C4) using a adjustable spanner.
7. Pull the old valve cartridge (C5) away from the tap.
8. Ensure that the valve chamber (D1) is clean of dirt and grit.
9. Place the new valve (C5) in the chamber (D1), ensuring the locators on the base of valve (C5) align with the recesses in the chamber of the tap (D1).
10. Reassemble the tap in the reverse order.

## To replace the spout o-rings:

1. Tilt the handle (B3) into the on position.
2. Remove the hot / cold indices (B1) using a thumbnail or small screwdriver.
3. Loosen grub screw (B2) using a 2.5mm A/F Allen key.
4. Pull the handle (B3) vertically away from the tap.
5. Unscrew the decorative cover (C1) whilst holding the base of core (D1) or the tap is fixed.
6. Pull the tap spout (A4) upwards away from the core (D1)
7. Remove the old O-rings (D2), take note of the orientation of the O-rings as installed.
8. Ensure the core (D1) and inside of the spout (A4) is clean of dirt and grit.
9. Carefully locate the new O-rings (D2) onto the core (D1).
10. Grease the O-rings thoroughly with silicone or alternative similar grease.
11. Reassemble the tap in the reverse order; ensure to replace the white spacer rings (C3 & D3) are placed above and below the spout as disassembled.