



General Advice:

- These instructions are intended as a guide only, if you are in any doubt you should seek the advice of a qualified professional.
- Take care not to mark finished parts with screwdrivers or other tools.
- Use a pair of rubber gloves to get a better grip on decorative hand tight parts.
- Ensure all parts are reassembled tightly.
- After maintenance test that all assemblies are water tight and function correctly.
- Always isolate the hot and cold water supplies before starting any maintenance, once isolated you should drain any residual water from your system.

To replace the valve:

1. Unscrew handle (C5). Note; a rubber glove may be required to improve grip.
2. Loosen the grub screw (C4)
3. Whilst firmly holding the tap body (B9) unscrew valve locking nut (C2) using an adjustable spanner.
4. Pull the handle (C3) horizontally away from the tap body (B1).
5. Remove the old valve cartridge (C1).
6. Clean any debris from the chamber of the tap (B1).
7. Locate the new valve (C1) into the tap chamber (B1); ensure the pegs on the valve (C1) align with the recess in the chamber (B1).
8. Reassemble the tap in the reverse order.

To replace the spout o-rings:

1. Loosen grub screw (A5) at the rear of the spout body (A4)
2. Pull the spout (A4) vertically away from the body (B9).
3. Pull spout arm (B8) vertically away from body (B9).
4. Remove the old o-rings (B2) using a small screwdriver or similar.
5. If worn, remove the white PTFE spacers (B1, B3, B5 & B6)
6. Ensure the inside of the spout body (A4) is clean of dirt and grit with a soft wet cloth.
7. If required locate the new white PTFE spacers (B1, B3, B5 & B6).
8. Carefully locate the new O-rings (B2) onto the body.
9. Grease the O-rings (B2) thoroughly with silicone or alternative similar grease.
10. Reassemble the tap in the reverse order.