


TAP2104 – Deck mixer tap

Key:	Description:	APX size (mm):	Base material	Colour:	QTY:
A1	Black flow straightener	M24 male 22 AF	Plastic	Black	1
A2	Spout	170 x 130	Brass	Chrome	1
A3	Spout collar	32 x 13.5	Brass	Chrome	1
A4	PTFE spacer	3 x 23 OD	Plastic	White	1
A5	O-ring	3 x 23 OD	Rubber	Black	1
A6	O-ring	3 x 23 OD	Rubber	Black	1
B1	Dust cap	36 x 8	Plastic	Chrome	1
B2	Handle screw	M4 x 10	Brass	Brass	1
B3	Hot indices	38 x 6	Plastic	Red	1
B4	Handle	45 x 35	Mazak	Chrome	1
B5	Hot valve	½" Comp length, 53mm	Brass	Brass	1
C1	Dust cap	36 x 8	Plastic	Chrome	1
C2	Handle screw	M4 x 12.5	Brass	Brass	1
C3	Cold indices	38 x 6	Plastic	Red	1
C4	Handle	45 x 35	Mazak	Chrome	1
C5	Hot valve	½" Comp length, 53mm	Brass	Brass	1
D1	Tap body	210 x 28	Brass	Chrome	1
D2	Inlet leg	48 x 21	Brass	Brass	2
E1	Upper seal	210 x 3	Foam	Black	1
E2	Lower seal	36 x 2	Rubber	White	2
E3	Fixing nut	39 x 10	Plastic	Black	2

TAP2104 – Deck mixer tap

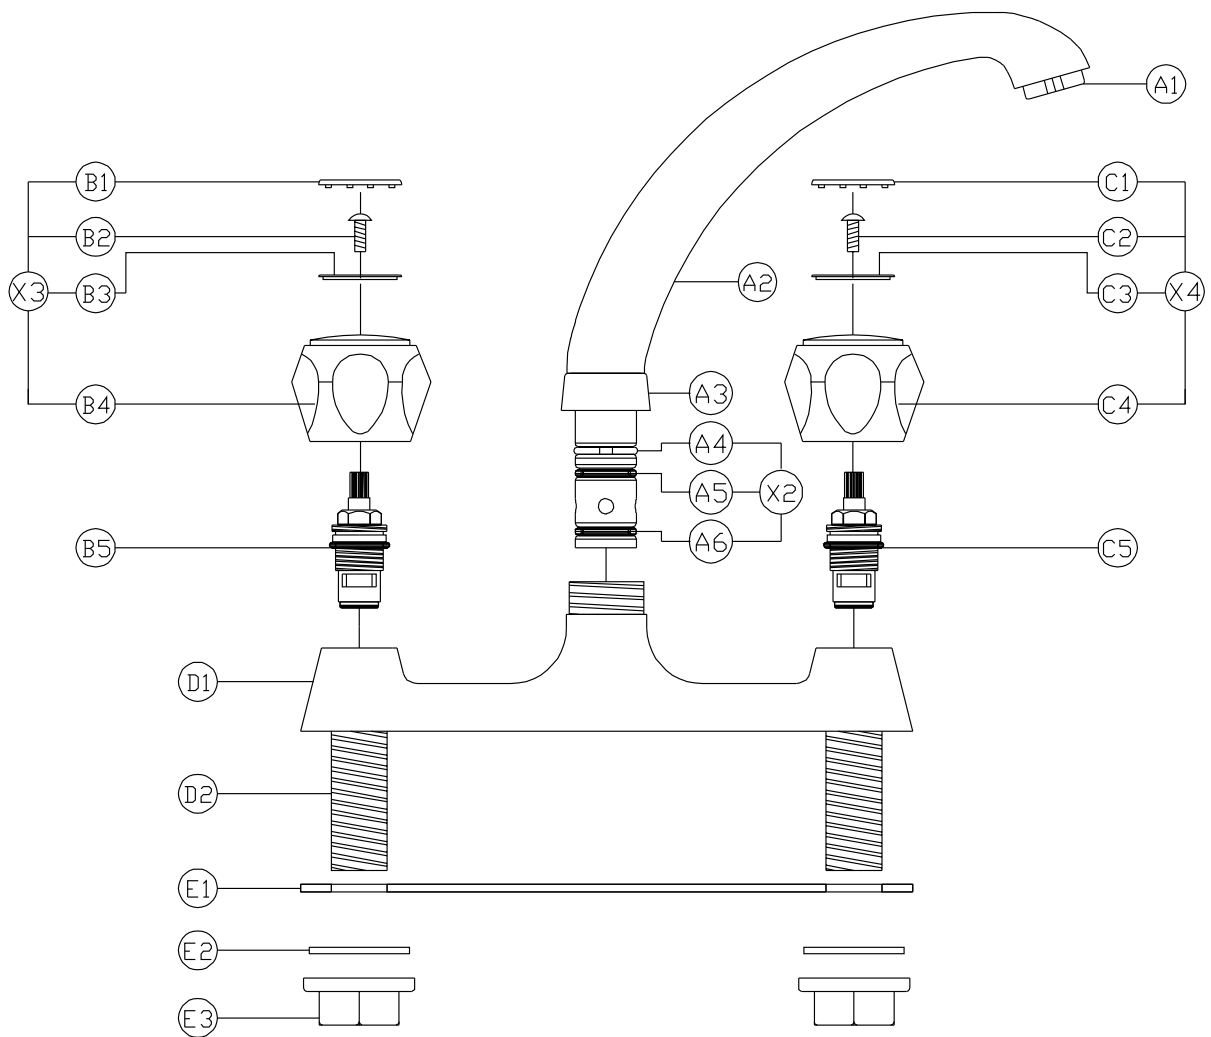

LAMONA
Exclusive to Howdens Joinery Co.

TAP2104 - Deck Mixer service drawing v1

(c) abode home products ltd
www.abode.eu

our policy is to continually
improve and develop products,
and accordingly we reserve the
right to amend specifications
without prior notice

TAP2104 – Deck mixer tap

General Advice:

- These instructions are intended as a guide only, if you are in any doubt you should seek the advice of a qualified professional.
- Take care not to mark finished parts with screwdrivers or other tools.
- Use a pair of rubber gloves to get a better grip on decorative hand tight parts.
- Ensure all parts are reassembled tightly.
- After maintenance test that all assemblies are water tight and function correctly.
- Always isolate the hot and cold water supplies before starting any maintenance, once isolated you should drain any residual water from your system.

To replace the hot valve:

1. Lever out the dust cap (B1) using a small precision screwdriver or fingernail.
2. Unscrew the crosshead screw (B2)
3. Pull the handle (B3 & B4) away from the tap body.
4. Holding the tap body (D1) unscrew the valve (B5) using a 17mm ring spanner or adjustable wrench.
5. Clean any debris from the chamber in the tap body (D1).
6. Reassemble the tap in the reverse order.

To replace the spout o-rings:

1. Whilst holding body (D1) unscrew the spout locking collar (A3)
2. Pull the spout (A2) vertically away from the body (D1).
3. Remove the old o-rings (A5 & A6) using a small screwdriver or similar.
4. If worn, remove the white PTFE spacer (A4)
5. Ensure the inside of the body (D1) and the spout base (A2) is clean of dirt and grit with a soft wet cloth.
6. If required locate the new white PTFE spacer (A4).
7. Carefully locate the new O-rings (A5 & A6) onto the spout base (A2).
8. Grease the O-rings (A5 & A6) thoroughly with silicone or alternative similar grease.
9. Reassemble the tap in the reverse order.