
# TAP3220 – Savoca Right Angled Single Lever Tap

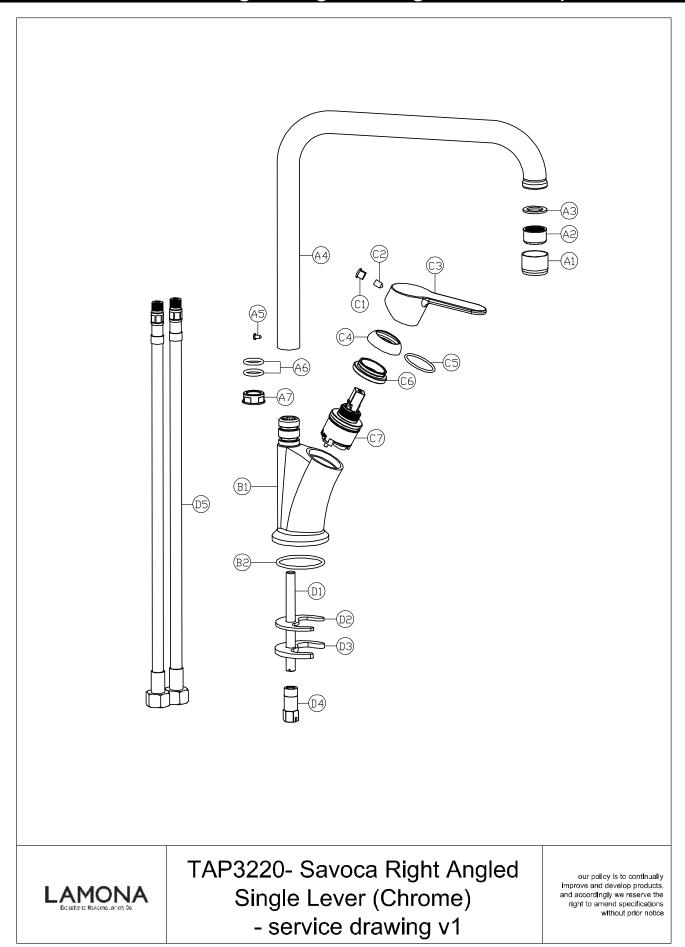

## TAP3220 - Savoca Right Angled Single Lever Tap

#### **General Advice:**

- · These instructions are intended as a guide only, if you are in any doubt you should seek the advice of a qualified professional.
- Take care not to mark finished parts with screwdrivers or other tools.
- Use a pair of rubber gloves to get a better grip on decorative hand tight parts.
- Ensure all parts are reassembled tightly.
- After maintenance test that all assemblies are water tight and function correctly.
- Always isolate the hot and cold water supplies before starting any maintenance, once isolated you should drain any residual water from your system.

#### To replace the valve:

- 1. Remove dust cap (C1) and Loosen grub screw (C2) on the back of handle (C3) using a 2.5mm A/F Allen key.
- 2. Pull the handle (C3) vertically away from the tap body (B1).
- 3. Unscrew the decorative cover (C4) vertically away from tap body (B1) by hand.
- 4. With the tap (B1) fixed to the sink/base unit, using an adjustable spanner unscrew the valve lock nut (C6).
- 5. Clean the Inside of chamber (B1) with a soft wet cloth.
- 6. Replace the faulty valve (C7) with the new one and assemble in reverse order.

### To replace the spout O-rings:

- 1. Loosen grub screw (A5) on the back of body (B1) using a 1.5mm A/F Allen key.
- 2. Pull the spout (A4) vertically away from the tap body (B1).
- 3. Remove O-rings (A6) using a precision screwdriver and replace with new ones.
- 4. Reassemble the tap in reverse order.