
TAP3631-1/32-1/33-1 — Calaggio Swan Neck Monobloc

Key:	Description:	APX size (mm):	Base material	Colour:	QTY:
A1	Aerator housing	M22 F	Brass	Chrome	1
A 2	Aerator	M22	Plastic	Blue/Grey	1
A 3	Rubber gasket	21 OD	Rubber	Black	1
A4	Spout	324 x 235	Brass	Chrome	1
A5	Spout locking collar	14 x 32	Brass	Chrome	1
A6	Anti friction split ring	3 x 23 OD	Plastic	White	1
A7	O-ring	3 x 23 OD	Rubber	Black	1
A8	O-ring	3 x 23 OD	Rubber	Black	1
B1	Body	93 x 68.5	Brass & Powder coating	Chrome/Grey/Black/ Cream	1
B2	Base plinth	4.5 x 45	Brass	Chrome	1
B3	Upper seal	2 x 43 OD	Rubber	White	1
C1	Cold handle	30 x 18	Zamak	Chrome	1
C2	Grub screw	6 x 4	Steel	Steel	1
C3	Cold valve	½" CD, length 46	Brass	Brass	1
D1	Hot handle	30 x 18	Zamak	Chrome	1
D2	Grub screw	6 x 4	Steel	Steel	1
D3	Hot valve	½" CD, length 46	Brass	Brass	1
E1	Fixing stud	M8 x 95	Steel	Silver	1
E2	Stabiliser plate	88 x 58	Plastic	White	1
E3	Lower gasket	45 OD x 3.5	Rubber	Black	1
E4	Metal horseshoe	51 x 5	Steel	Silver	1
E5	Fixing nut	15 x 11 AF	Brass	Brass	1
F1	Hot flexible pipe	M10 x 370 x ½" BSP F	Stainless steel/Brass	Silver/red	1
F2	Cold flexible pipe	M10 x 365 x ½" BSP M	Stainless steel/Brass	Silver/blue	1
F3	Non return valve	16 x 15	Plastic	White	1

TAP3631-1/32-1/33-1 - Calaggio Swan Neck Monobloc

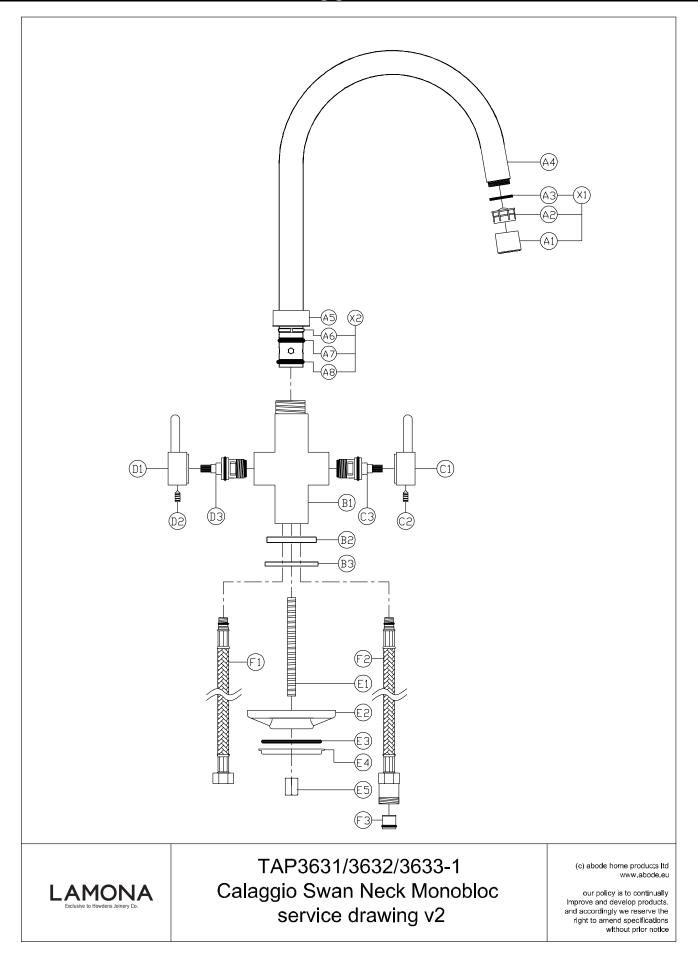

TAP3631-1/32-1/33-1 - Calaggio Swan Neck Monobloc

General Advice:

- These instructions are intended as a guide only, if you are in any doubt you should seek the advice of a qualified professional.
- Take care not to mark finished parts with screwdrivers or other tools.
- Use a pair of rubber gloves to get a better grip on decorative hand tight parts.
- Ensure all parts are reassembled tightly.
- After maintenance test that all assemblies are water tight and function correctly.
- Always isolate the hot and cold water supplies before starting any maintenance, once isolated you should drain any residual water from your system.

To replace the valve:

- 1. Loosen grub screw (C3) on the underside of handle (C4) using a 2mm A/F allen key.
- 2. Pull the handle (C4) horizontally away from the tap.
- 3. Pull bush (C2) horizontally away from tap.
- 4. Hold the body of the tap (B1) firmly. Using an adjustable or 17mm ring spanner unscrew the valve (C1).
- 5. Clean the Inside of chamber (B1) with a soft wet cloth.
- 6. Reassemble the tap in the reverse order.

To replace the spout o-rings:

- Unscrew spout locking nut (A5) by hand.
- 2. Pull the spout (A4) vertically away from the body (B1).
- 3. Remove the old o-rings (A7 & A8) using a small screwdriver or similar.
- 4. If worn, remove the white PTFE spacer (A6).
- 5. Ensure the inside of the body (B1) and the spout base is clean of dirt and grit with a soft wet cloth.
- 6. If required locate the new white PTFE spacer (A6).
- 7. Carefully locate the new O-rings (A7 & A8) onto the spout base (A4).
- 8. Grease the O-rings thoroughly with silicone or alternative similar grease.
- 9. Reassemble the tap in the reverse order.