
# TAP3582 – Sorico Monobloc

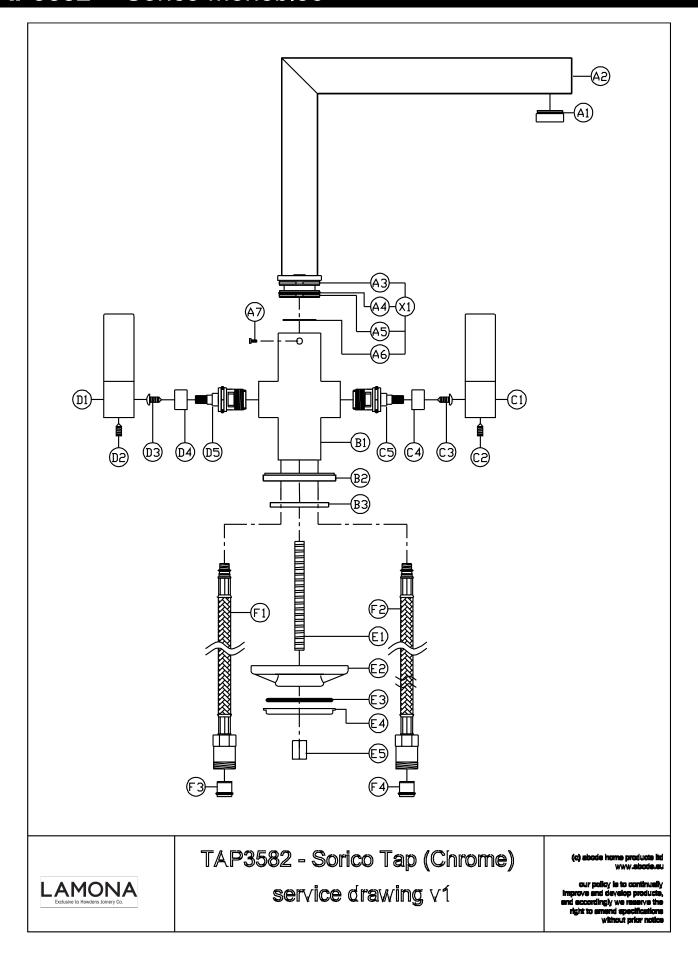

# TAP3582 - Sorico Monobloc

#### **General Advice:**

- These instructions are intended as a guide only, if you are in any doubt you should seek the advice of a qualified professional.
- Take care not to mark finished parts with screwdrivers or other tools.
- Use a pair of rubber gloves to get a better grip on decorative hand tight parts.
- Ensure all parts are reassembled tightly.
- After maintenance test that all assemblies are water tight and function correctly.
- Always isolate the hot and cold water supplies before starting any maintenance, once isolated you should drain any residual water from your system.

### To replace the hot valve:

- 1. Loosen grub screw (D2) on the underside of handle (D1) using an allen key.
- 2. Pull the handle (D1) horizontally away from the tap.
- 3. Unscrew the screw (D3) with a crosshead screwdriver.
- 4. Pull the plastic valve bush (D4) away from valve (D5).
- 5. Hold the body of the tap (B1) firmly. Using an adjustable or open spanner unscrew the valve (D5).
- 6. Clean the Inside of chamber (B1) with a soft wet cloth.
- 7. Reassemble the tap in the reverse order.

## To replace the spout o-rings:

- 1. Loosen grub screw (A7) on the rear of body (B1) using an allen key.
- 2. Pull the spout (A2) vertically away from the body (B1).
- 3. Remove the old o-ring (A4) using a small screwdriver or similar.
- 4. If worn, remove the white PTFE spacer (A3 & A4).
- 5. Ensure the inside of the body (B1) and the spout base is clean of dirt and grit with a soft wet cloth.
- 6. If required locate the new white PTFE spacer (A3 & A4).
- 7. Carefully locate the new O-rings (A4) onto the spout base (A2).
- 8. Grease the O-rings thoroughly with silicone or alternative similar grease.
- 9. Reassemble the tap in the reverse order.