
TAP4802 – Victorian monobloc

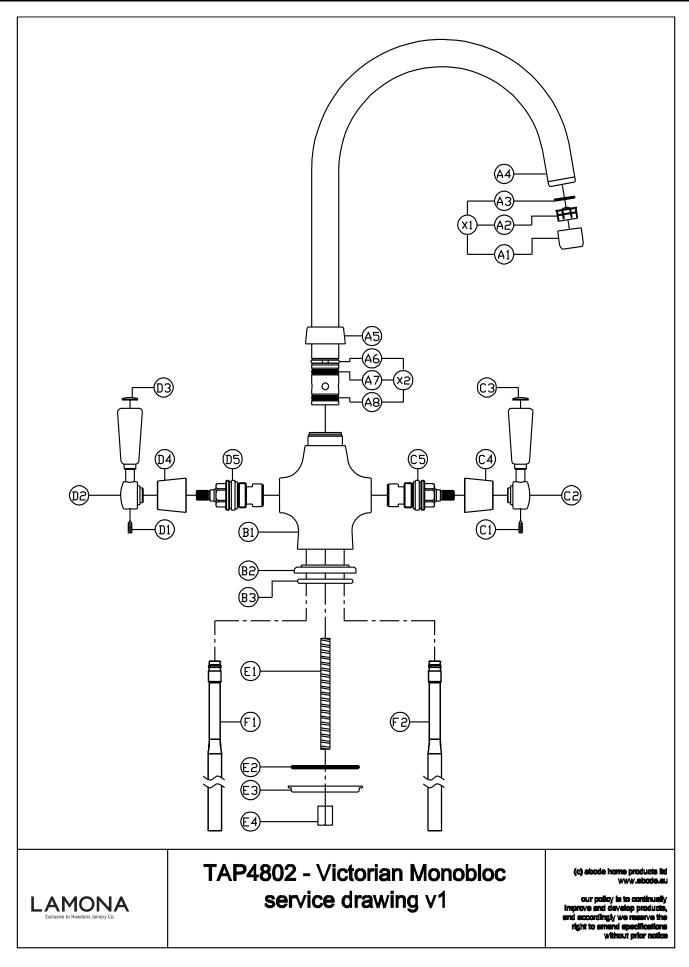

TAP4802 – Victorian monobloc

General Advice:

- · These instructions are intended as a guide only, if you are in any doubt you should seek the advice of a qualified professional.
- Take care not to mark finished parts with screwdrivers or other tools.
- Use a pair of rubber gloves to get a better grip on decorative hand tight parts.
- Ensure all parts are reassembled tightly.
- After maintenance test that all assemblies are water tight and function correctly.
- Always isolate the hot and cold water supplies before starting any maintenance, once isolated you should drain any residual water from your system.

To replace the hot valve:

- 1. Unscrew the grub screw (D1) using an allen key.
- 2. Pull the handle (D3) horizontally away from the tap body (B1).
- 3. Unscrew the valve cover (D4) from the valve (D5) by hand.
- 4. Holding the tap body (B1) unscrew the valve (D5) using a 17mm ring spanner or adjustable wrench.
- 5. Clean any debris from the chamber in the tap body (B1).
- 6. Reassemble the tap in the reverse order.

To replace the spout o-rings:

- 1. Whilst holding body (B1) unscrew the spout locking collar (A5)
- 2. Pull the spout (A4) vertically away from the body (B1).
- 3. Remove the old o-rings (A7 & A8) using a small screwdriver or similar.
- 4. If worn, remove the white PTFE spacer (A6).
- 5. Ensure the inside of the body (B1) and the spout base (A4) is clean of dirt and grit with a soft wet cloth.
- 6. If required locate the new white PTFE spacer (A6).
- 7. Carefully locate the new O-rings (A7 & A8) onto the spout base (A4).
- 8. Grease the O-rings (A7 & A8) thoroughly with silicone or alternative similar grease.
- 9. Reassemble the tap in the reverse order.