
TAP3600-1 – Roya Swan Neck Monobloc

Key:	Description:	APX size (mm):	Base material:	Colour:	QTY:
A1	Aerator	30 x 13	Plastic/Rubber	White/Grey	1
A2	Spout	260 x 252	Brass	Chrome	1
A3	Anti friction split ring	24 OD x 2.5	PTFE	White	1
A4	O-ring	2 x 22	Rubber	Black	1
A5	O-ring	2 x 22	Rubber	Black	1
A6	Anti friction split ring	1 x 32	PTFE	White	1
A7	Spout grub screw	M5 x 6	Brass	Brass	1
B1	Tap body	100 x 68	Brass	Chrome	1
B2	Base plinth	5 x 48	Brass	Chrome	1
B3	Upper seal	2 x 43	Rubber	White	1
C1	Cold handle	25 x 85	Zamak	Chrome	1
C2	Grub screw	5 x 4	Steel	Steel	1
C3	Crosshead screw	9 x 12	Brass	Brass	1
C4	Valve bush	16 x 12	Plastic	White	1
C5	Cold valve	M20 x 38mm	Brass	Brass	1
D1	Hot handle	25 x 85	Zamak	Chrome	1
D2	Grub screw	5 x 4	Steel	Steel	1
D3	Crosshead screw	9 x 12	Brass	Brass	1
D4	Valve bush	16 x 12	Plastic	White	1
D5	Hot valve	M20 x 38mm	Brass	Brass	1
E1	Fixing stud	M8 x 95	Steel	Silver	1
E2	Stabiliser plate	88 x 58	Plastic	White	1
E3	Lower gasket	45 OD x 3.5	Rubber	Black	1
E4	Metal horseshoe	51 x 5	Steel	Silver	1
E5	Fixing nut	18 x 11 AF	Brass	Brass	1
F1	Hot flexible pipe	M10 x 370 x ½" BSP F	Stainless steel/Brass	Silver/red	1
F2	Cold flexible pipe	M10 x 365 x ½" BSP M	Stainless steel/Brass	Silver/blue	1
F4	Non return valve	16 x 15	Plastic	White	1

TAP3600-1 – Roya Swan Neck Monobloc

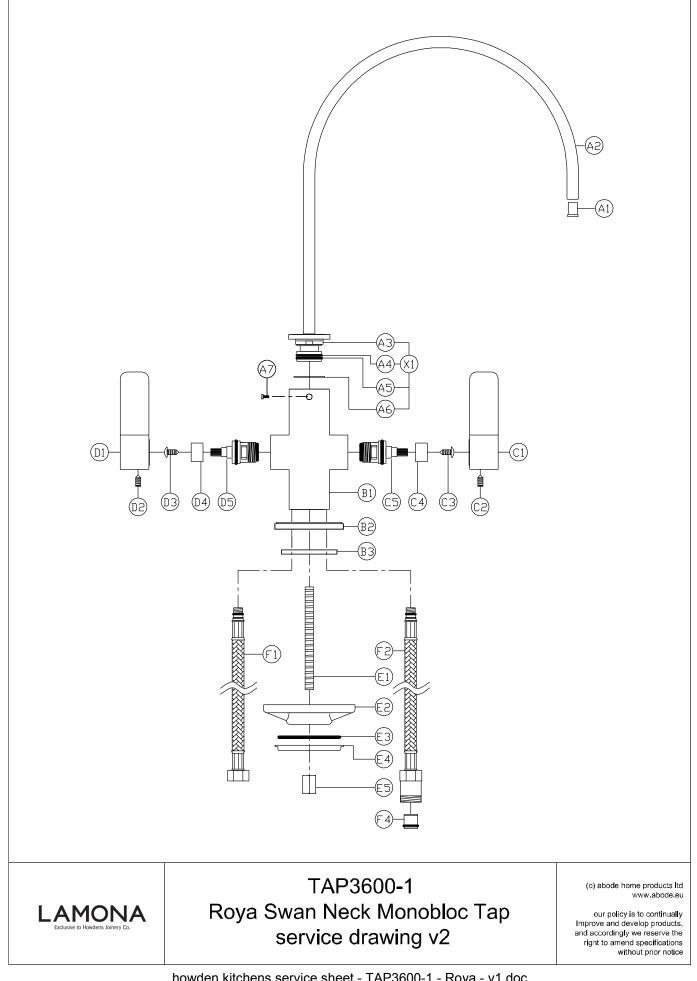

TAP3600-1 – Roya Swan Neck Monobloc

General Advice:

- These instructions are intended as a guide only, if you are in any doubt you should seek the advice of a qualified professional.
- Take care not to mark finished parts with screwdrivers or other tools.
- Use a pair of rubber gloves to get a better grip on decorative hand tight parts.
- Ensure all parts are reassembled tightly.
- After maintenance test that all assemblies are water tight and function correctly.
- Always isolate the hot and cold water supplies before starting any maintenance, once isolated you should drain any residual water from your system.

To replace the hot valve:

- 1. Loosen grub screw (C2) on the underside of handle (C1) using a 2mm A/F allen key.
- 2. Pull the handle (C1) horizontally away from the tap.
- 3. Unscrew (C3) and remove valve bush (C4) from the valve (C5). This valve bush (C4) should be assembled on to the new valve.
- 4. Hold the body of the tap (B1) firmly. Using an adjustable or 17mm ring spanner unscrew the valve (C5).
- 5. Clean the Inside of chamber (B1) with a soft wet cloth.
- 6. Reassemble the tap in the reverse order.

To replace the spout o-rings:

- 1. Loosen grub screw (A7) on the rear of body (B1) using a 2.5mm A/F allen key.
- 2. Pull the spout (A2) vertically away from the body (B1).
- 3. Remove the old o-rings (A4 & A5) using a small screwdriver or similar.
- 4. If worn, remove the white PTFE spacers (A3 & A6).
- 5. Ensure the inside of the body (B1) and the spout base is clean of dirt and grit with a soft wet cloth.
- 6. If required locate the new white PTFE spacers (A3 & A6) on to the spout base.
- 7. Carefully locate the new O-rings (A4 & A5) onto the spout base.
- 8. Grease the O-rings (A4 & A5) thoroughly with silicone or alternative similar grease.
- 9. Reassemble the tap in the reverse order.