


TAP9021 – Lever Deck mixer tap

Key:	Description:	Part No:
A1	Black flow straightener	
A2	Rubber gasket	
A3	Spout	
A4	Spout locking collar	
A5	Anti friction split ring	
A6	o-ring	
A7	o-ring	
B1	Dust cap	
B2	Handle screw	
B3	Red indices	
B4	Handle	
B5	Hot valve	
C1	Dust cap	
C2	Handle screw	
C3	cold indices	
C4	Handle	
C5	cold valve	
D1	Tap body	
D2	Inlet legs	
E1	Upper seal	
E2	Fixing nut	
X1	Aerator assembly	
X2	Spout base assembly	
X3	Hot Handle assembly	
X4	Cold Handle assembly	

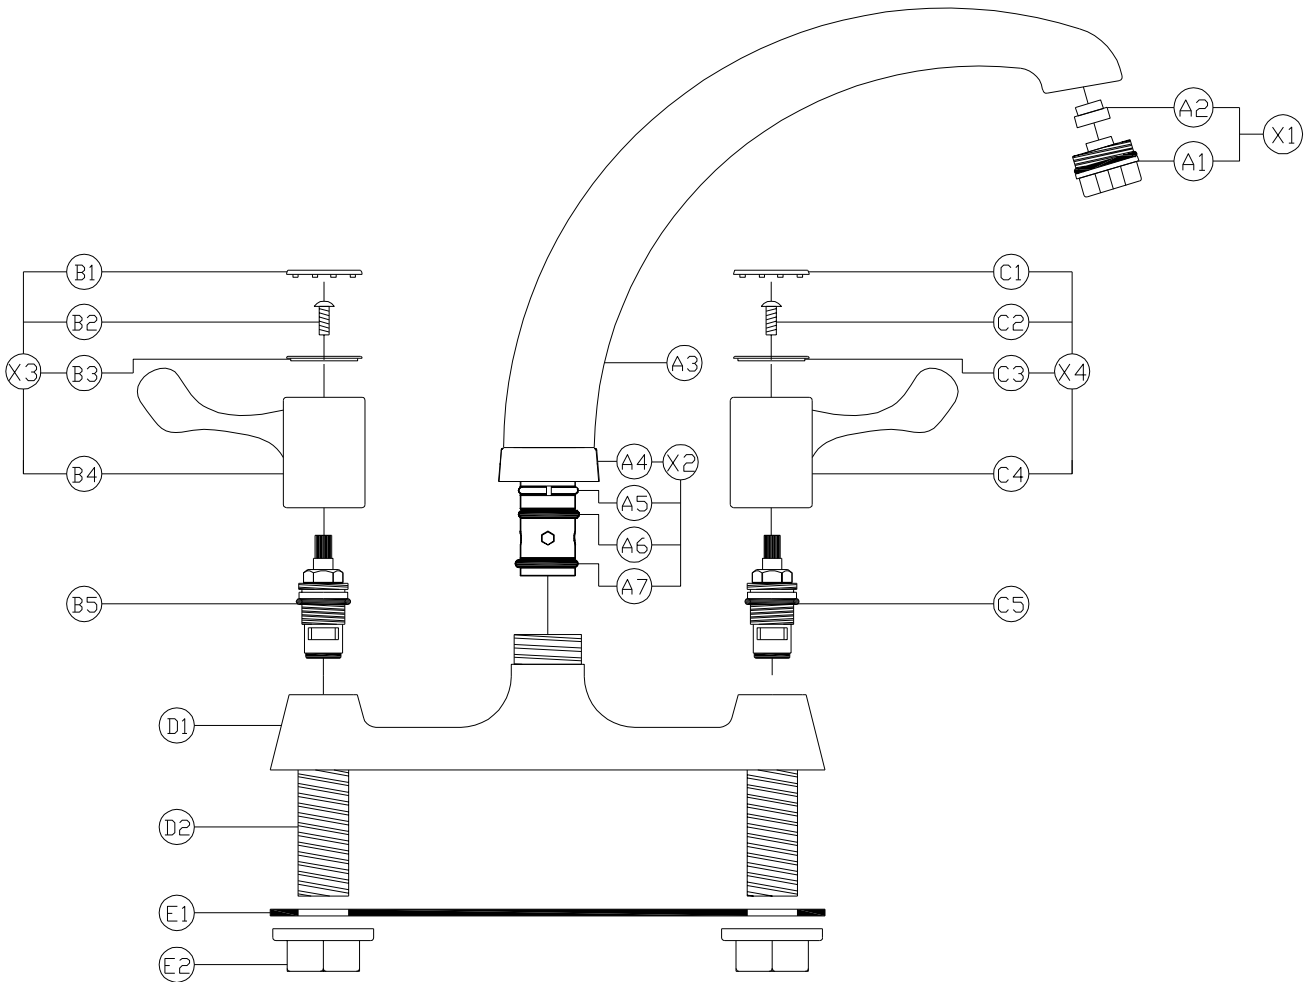

TAP 9021 - lever deck service drawing v1

(c) abode home products ltd
www.abode.eu

our policy is to continually
improve and develop products,
and accordingly we reserve the
right to amend specifications
without prior notice

General Advice:

- These instructions are intended as a guide only, if you are in any doubt you should seek the advice of a qualified professional.
- Take care not to mark finished parts with screwdrivers or other tools.
- Use a pair of rubber gloves to get a better grip on decorative hand tight parts.
- Ensure all parts are reassembled tightly.
- After maintenance test that all assemblies are water tight and function correctly.
- Always isolate the hot and cold water supplies before starting any maintenance, once isolated you should drain any residual water from your system.

To replace the hot valve:

1. Lever out the dust cap (B1) using a small precision screwdriver or fingernail.
2. Unscrew the crosshead screw (B2)
3. Pull the handle (B3 & B4) away from the tap body.
4. Holding the tap body (D1) unscrew the valve (B5) using a 17mm ring spanner or adjustable wrench.
5. Clean any debris from the chamber in the tap body (D1).
6. Reassemble the tap in the reverse order.

To replace the spout o-rings:

1. Whilst holding body (D1) unscrew the spout locking collar (A4)
2. Pull the spout (A3) vertically away from the body (D1).
3. Remove the old o-rings (A6 & A7) using a small screwdriver or similar.
4. If worn, remove the white PTFE spacer (A5).
5. Ensure the inside of the body (D1) and the spout base (X2) is clean of dirt and grit with a soft wet cloth.
6. If required locate the new white PTFE spacer (A5).
7. Carefully locate the new O-rings (A6 & A7) onto the spout base (X2).
8. Grease the O-rings (A6 & A7) thoroughly with silicone or alternative similar grease.
9. Reassemble the tap in the reverse order.