


ACT2051 – Sedona Single Lever Pull out Spray

abode

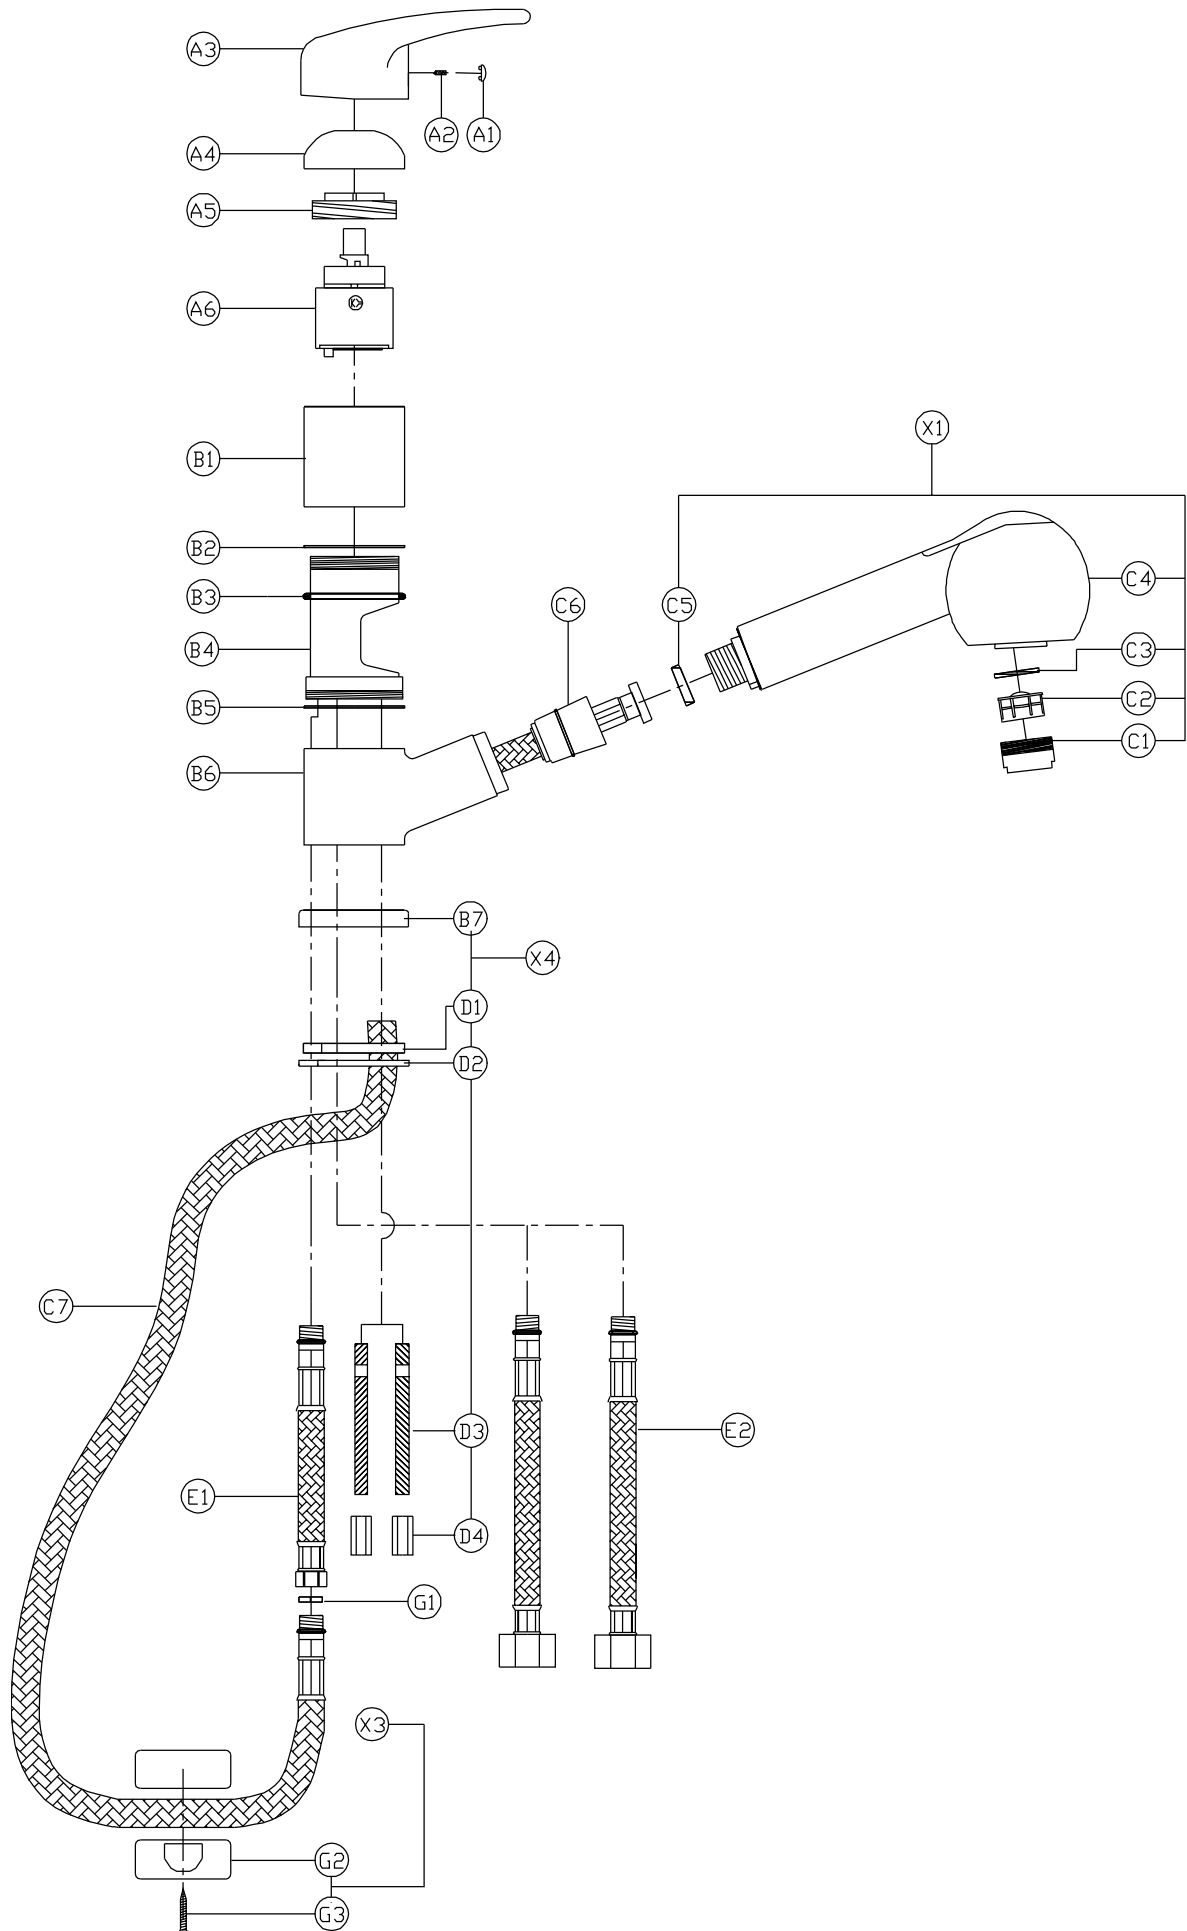

General Advice:

- These instructions are intended as a guide only, if you are in any doubt you should seek the advice of a qualified professional.
- Take care not to mark finished parts with screwdrivers or other tools.
- Use a pair of rubber gloves to get a better grip on decorative hand tight parts.
- Ensure all parts are reassembled tightly.
- After maintenance test that all assemblies are water tight and function correctly.
- Always isolate the hot and cold water supplies before starting any maintenance, once isolated you should drain any residual water from your system.

To replace the valve:

1. Tilt the handle (A3) into the on position.
2. Remove the hot / cold indices (A1) using a thumbnail or small screwdriver.
3. Loosen grub screw (A2) using a 2.5mm A/F Allen key.
4. Pull the handle (A3) vertically away from the tap.
5. Unscrew the decorative cover (A4) by hand.
6. Unscrew the valve lock nut (A5) using a adjustable spanner.
7. Pull the old valve cartridge (A6) away from the tap.
8. Ensure that the valve chamber (B1) is clean of dirt and grit.
9. Place the new valve (A6) in the chamber (B1), ensuring the locators on the base of valve (A6) align with the recesses in the chamber of the tap (B1).
10. Reassemble the tap in the reverse order.

To replace the spout o-rings:

NOTE: O-ring (B3) ensures the spout turns smoothly but, this is a non-sealing part; all water is retained by hose (C7). If the spout is not turning smoothly ensure the hose (C7) is not twisted or tangled around any pipework.

To replace the spray head:

1. Pull the sprayhead (C4) out from the spout base (B4).
2. Whilst holding the sprayhead (C4) unscrew the connecting nut on the end of spray hose (C6) using a spanner.
3. Replace the sprayhead ensuring that seal (C5) is present, tip: place the seal (C5) in warm water before assembly to soften it.