

TAP1140 – 1 Rienza Filter Tap

Key:	Description:	APX size (mm):	Base material:	Colour:	QTY:
A1	Aerator housing	M22 x 1 F	Brass	Chrome	1
A2	Aerator	M22	Plastic	Blue/Grey	1
A3	Rubber gasket	21 OD	Rubber	Black	1
A4	Spout	260 x 190	Brass	Chrome	1
A5	Spout locking collar	32 x 14	Brass	Chrome	1
A6	Anti friction split ring	24 OD	Plastic	White	1
A7	o-ring	23 OD	Rubber	Black	1
A8	o-ring	23 OD	Rubber	Black	1
B1	Body	44 DIA x 70	Brass	Chrome	1
B2	Upper seal	45 OD	Rubber	Black	1
B3	Stabilising bracket	88 x 58	Plastic	White	1
B4	Rubber horseshoe	51 X 2	Rubber	Black	1
B5	Metal horseshoe	51 x 5	Metal	Silver	1
B6	Hollow fixing stud	M12 X 110	Brass	Brass	1
B7	Fixing nut	65 x 11 AF	Brass	Brass	1
B8	Fibre seal	10 X 1	Fibre	Red	1
B9	Adaptor nut	25 x 14 AF	Brass	Brass	1
C1	Dust cap	11 x 5	Plastic	Chrome	1
C2	Crosshead screw	9.5 x 12.5	Steel	Steel	1
C3	Handle	91 x 21	Mazak	Chrome	1
C4	Valve bush	33 DIA x 35	Brass	Brass	1
C5	Cold/filter valve	48 x 29	Brass	Brass	1
D1	Dust cap	11 x 5	Plastic	Chrome	1
D2	Crosshead screw	9.5 x 12.5	Steel	Steel	1
D3	Handle	91 x 21	Mazak	Chrome	1
D4	Hot valve	¹ / ₂ " CD, length 51mm	Brass	Brass	1
D5	Valve bush	36 x 8	Brass	Brass	1
E1	Hot flexi tail pipe	1/2" BSP female x M12 x 255mm	Rubber/Brass/Inox	Silver/Red	1
E2	Cold flexi tail pipe	¹ / ₂ " BSP female x M12 x 255mm	Rubber/Brass/Inox	Silver/Blue	1
F1	Compression nut	11 x 23 AF	Brass	Silver	1
F2	Compression olive	17 x 6	Copper	Copper	1
F3	3-way valve	42 x 46	Brass	Silver	1
F4	3-way push fit adaptor	33 X 33 AF	Plastic	Grey	1
G1	Filter bracket screws	4 x 28	Steel	Silver	1
G2	Filter bracket	45 x 19	Plastic	White	1
G3	Blue flexible pipe	1000 x 6	Plastic	Blue	1
G4	Filter cartridge	50 x 270	Plastic	White	1
G5	Blue flexible pipe	Off-cut from (G3)	N/A	N/A	1
G6	Pushfit connector	28 x 17 AF	Plastic	Grey	1
X1	Spout o-ring set	N/A	N/A	N/A	1

TAP1140-1 – Rienza Filter Tap

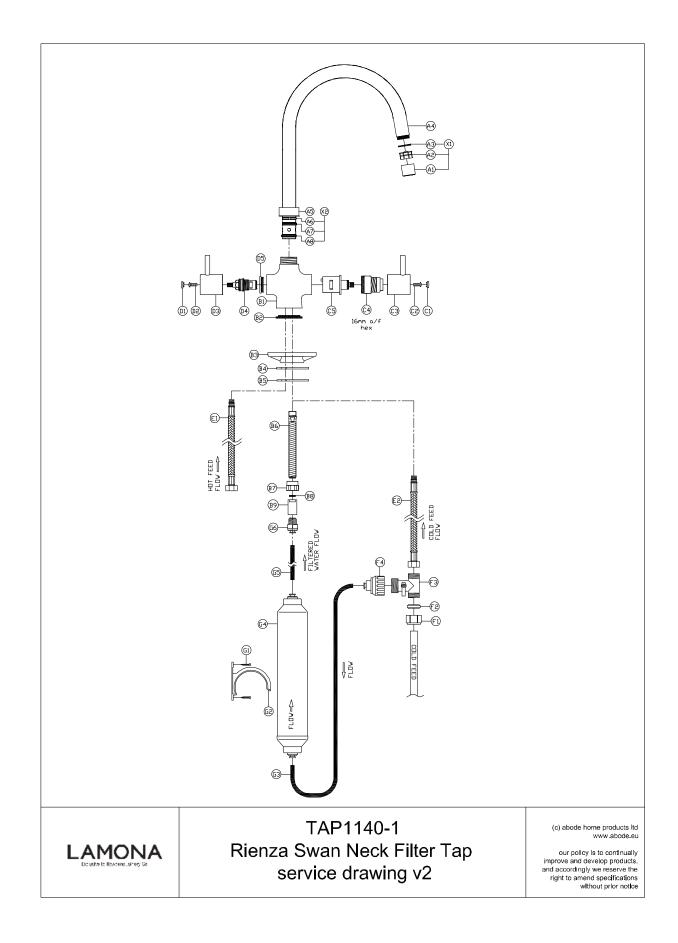

TAP1140-2 – Rienza Filter Tap

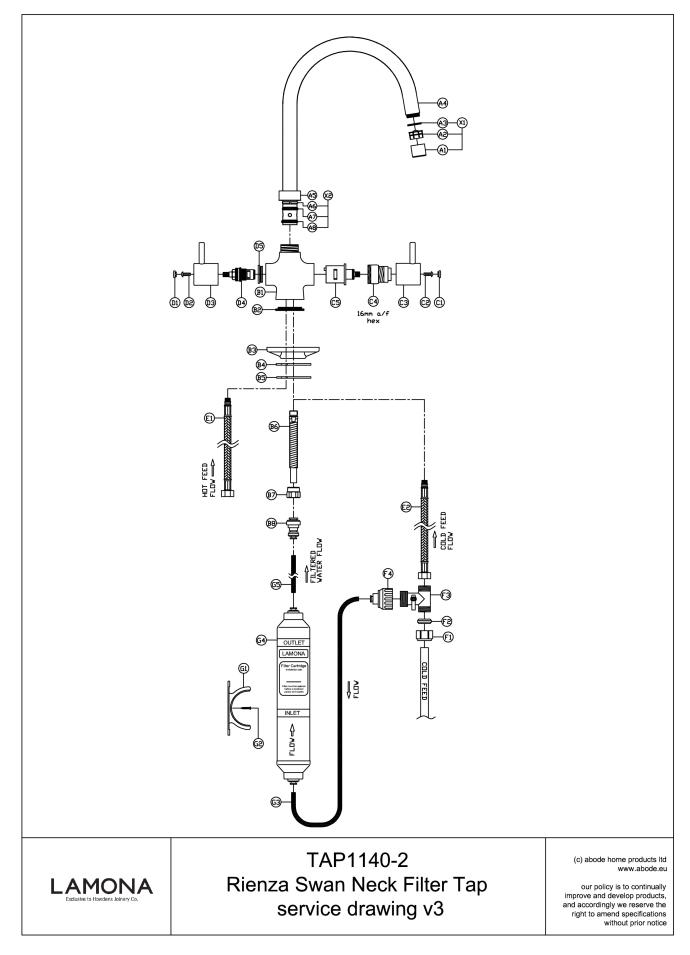

TAP1140 – Rienza Filter Tap

General Advice:

- These instructions are intended as a guide only, if you are in any doubt you should seek the advice of a qualified professional.
- Take care not to mark finished parts with screwdrivers or other tools.
- Use a pair of rubber gloves to get a better grip on decorative hand tight parts.
- Ensure all parts are reassembled tightly.
- After maintenance test that all assemblies are water tight and function correctly.
- Always isolate the hot and cold water supplies before starting any maintenance, once isolated you should drain any residual water from your system.

To replace the hot valve:

- 1. Lever out the dust cap (D1) using a small precision screwdriver or fingernail.
- 2. Unscrew the crosshead screw (D2)
- 3. Pull the handle (D3) away from the tap body.
- 4. Holding the tap body (B1) unscrew the valve (D4) using a 17mm ring spanner or adjustable wrench. Note: Valve bush (D5) may be removed with the valve (D4), If this is the case then the valve bush (D5) should be unscrewed from the valve (D4) and reused on the new valve (D4).
- 5. Clean any debris from the chamber in the tap body (B1).
- 6. Reassemble the tap in the reverse order.

To replace the cold/filter valve:

- 1. Lever out the dust cap (C1) using a small precision screwdriver of fingernail.
- 2. Unscrew the crosshead screw (C2)
- 3. Pull the handle (C3) horizontally away from the body (B1).
- 4. Unscrew the valve bush (C4) anticlockwise using the provided tool and pull it away from the body (B1).
- 5. Pull the old cold/filter valve cartridge (C5) away from the tap body (B1)
- 6. Clean any debris from the chamber in the tap body (B1).
- 7. Place the new cold/filter valve (C5) into the valve bush (C4) and push this assembly (C4+C5) into the chamber of (B1) ensuring that the locating peg on the base of the valve (C5) matches up with the one in the tap chamber (B1).
- 8. Push the valve cover (C4) into the body of the tap (B1) and tighten up using the provided tool.
- 9. Reassemble the handle (C3) onto the splined section of the valve (C5)

To replace the spout o-rings:

- 1. Whilst holding body (B1) unscrew the spout locking collar (A5)
- 2. Pull the spout (A4) vertically away from the body (B1).
- 3. Remove the old o-rings (A7 & A8) using a small screwdriver or similar.
- 4. If worn, remove the white PTFE spacer (A6).
- 5. Ensure the inside of the body (B1) and the spout base (X2) is clean of dirt and grit with a soft wet cloth.
- 6. If required locate the new white PTFE spacer (A6).
- 7. Carefully locate the new O-rings (A7 & A8) onto the spout base (X2).
- 8. Grease the O-rings (A7 & A8) thoroughly with silicone or alternative similar grease.
- 9. Reassemble the tap in the reverse order.