
## TAP4032-1 – Velino Swan Neck Monobloc

Key:	Description:	APX size (mm):	Base material:	Colour:	QTY:
A1	Aerator housing	M22 F	Brass	Chrome	1
A2	Aerator	Neoperl Honeycomb	Plastic	Blue/Black	1
A3	Rubber gasket	21 OD	Rubber	Black	1
A4	Spout	250 x 185	Brass	Chrome	1
A5	Anti friction split ring	18.5 OD x 5.5	Plastic	White	2
A6	O-ring	16.5 OD x 3	Rubber	Black	1
A7	O-ring	16.5 OD x 3	Rubber	Black	1
A8	Grub screw	5 x 4	Steel	Steel	1
B1	Tap body	110 x 90	Brass	Chrome	1
B2	Upper seal	42 OD x 3	Rubber	Black	1
C1	Cold compression valve	1⁄2" CD x 50	Brass	Brass	1
C2	Cold Indices	31.5 x 6.5	Plastic	Blue	1
C3	Grub screw	M5 x 4	Steel	Silver	1
C4	Cold handle	65 x 75	Zamak	Chrome	1
D1	Hot compression valve	1⁄2" CD x 50	Brass	Brass	1
D2	Hot Indices	31.5 x 6.5	Plastic	Blue	1
D3	Grub screw	M5 x 4	Steel	Silver	1
D4	Hot handle	65 x 75	Zamak	Chrome	1
E1	Fixing stud	M8 x 90	Steel	Silver	1
E2	Lower gasket	50 x 2	Rubber	Black	1
E3	Metal horseshoe	48.5 x 3	Steel	Silver	1
E4	Fixing nut	11 AF x 15	Brass	Brass	1
F1	Hot flexi inlet pipe	1⁄2" BSP F x 370 x M10	Stainless Steel/Brass	Silver/Red	1
F2	Cold flexi inlet pipe	1⁄2" BSP M x 365 x M10	Stainless Steel/Brass	Silver/Blue	1
X1	Aerator assembly	N/A	N/A	N/A	1

TAP4032-1 – Velino Swan Neck Monobloc

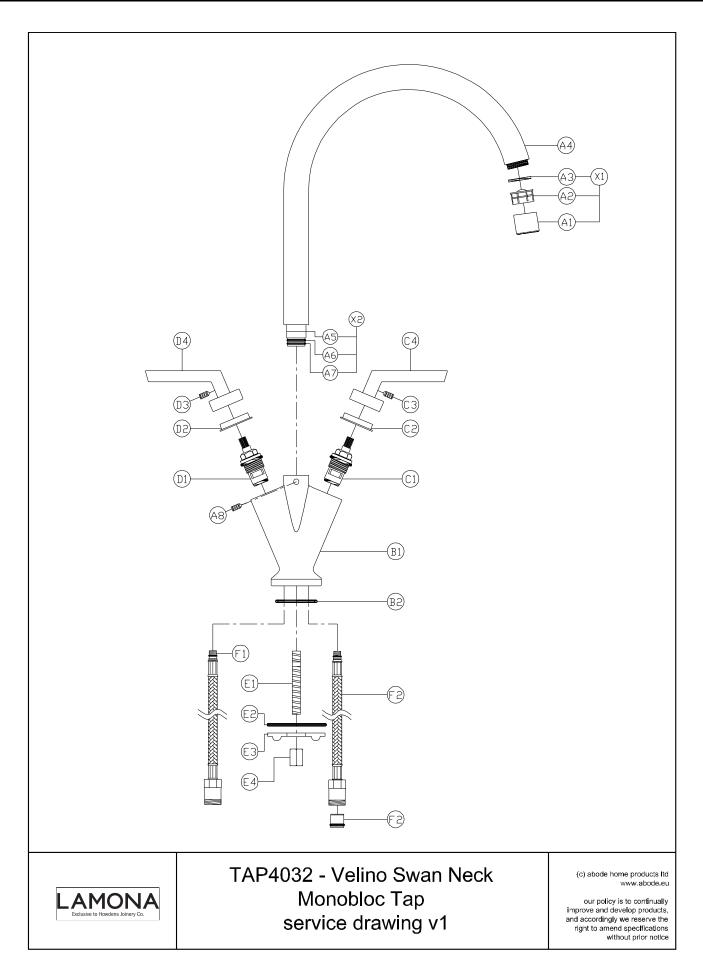

## General Advice:

- These instructions are intended as a guide only, if you are in any doubt you should seek the advice of a qualified professional.
- Take care not to mark finished parts with screwdrivers or other tools.
- Use a pair of rubber gloves to get a better grip on decorative hand tight parts.
- Ensure all parts are reassembled tightly.
- After maintenance test that all assemblies are water tight and function correctly.
- Always isolate the hot and cold water supplies before starting any maintenance, once isolated you should drain any residual water from your system.

## To replace the hot valve:

- 1. Loosen grub screw (C3) using a 2.5mm A/F Allen key.
- 2. Pull the handle (C4) and colour indice (C2) away from the tap body.
- 3. Holding the tap body (B1) unscrew the valve (C1) using a 17mm ring spanner or adjustable wrench.
- 4. Clean any debris from the chamber in the tap body (B1).
- 5. Reassemble the tap in the reverse order.

## To replace the spout o-rings:

- 1. Loosen grub screw (A8) using a 2.5mm A/F Allen key.
- 2. Pull the spout (A4) vertically away from the body (B1).
- 3. Remove the old o-rings (A6 & A7) using a small screwdriver or similar.
- 4. If worn, remove the white PTFE spacer (A5).
- 5. Ensure the inside of the body (B1) and the spout base (A4) is clean of dirt and grit with a soft wet cloth.
- 6. If required locate the new white PTFE spacer (A5).
- 7. Carefully locate the new O-rings (A6 & A7) onto the spout base (A4).
- 8. Grease the O-rings (A6 & A7) thoroughly with silicone or alternative similar grease.
- 9. Reassemble the tap in the reverse order.