
TAP4804-1/05-1/06-1/07-1 – Victorian Monobloc (Chrome)

Key:	Description:	APX size (mm):	Base material:	Colour:	QTY:
A1	Aerator housing	M22 F	Brass	Chrome	1
A2	Aerator	Neoperl Honeycomb	Plastic	Blue/Grey	1
A3	Rubber gasket	21 x 1.4	Rubber	Black	1
A4	Spout	270 x 215	Brass	Chrome	1
A5	Spout locking collar	14 x 32	Brass	Chrome	1
A6	Anti friction split ring	24 OD	Plastic	White	1
A7	O-ring	23 OD	Rubber	Black	1
A8	O-ring	23 OD	Rubber	Black	1
B1	Tap body	98 x 75	Brass	Chrome	1
B2	Base plinth	7 x 50	Brass	Chrome	1
B3	Upper gasket	45 x 3	Rubber	Black	1
C1	Grub screw	M4 x 6	Metal	Silver	1
C2	Handle	81 x 13	Mazak/Plastic	Chrome/White/Black/Cream	1
C3	Indices	14 x 7	Plastic	Chrome	1
C4	Valve cover	23 x 27	Brass	Chrome	1
C5	Hot valve	½" CD, length 53mm	Brass	Brass	1
D1	Grub screw	M4 x 6	Metal	Silver	1
D2	Handle	81 x 13	Mazak/Plastic	Chrome/White/Black/Cream	1
D3	Indices	14 x 7	Plastic	Chrome	1
D4	Valve cover	23 x 27	Brass	Chrome	1
D5	Hot valve	½" CD, length 53mm	Brass	Brass	1
E1	Fixing stud	M8 x 95	Metal	Silver	1
E2	Lower gasket	45 OD	Rubber	Black	1
E3	Metal horseshoe	51 x 5	Steel	Silver	1
E4	Fixing nut	11 AF x 15	Brass	Brass	1
F1	Hot inlet pipe	½" BSP female x M12 x 255mm	Rubber/Brass/Inox	Silver/Red	1
F2	Cold inlet pipe	½" BSP female x M12 x 255mm	Rubber/Brass/Inox	Silver/Blue	1
X1	Aerator assembly	N/A	N/A	N/A	1
X2	Spout base assembly	N/A	N/A	N/A	1

TAP4804-1/05-1/06-1/07-1 – Victorian Monobloc (Chrome)

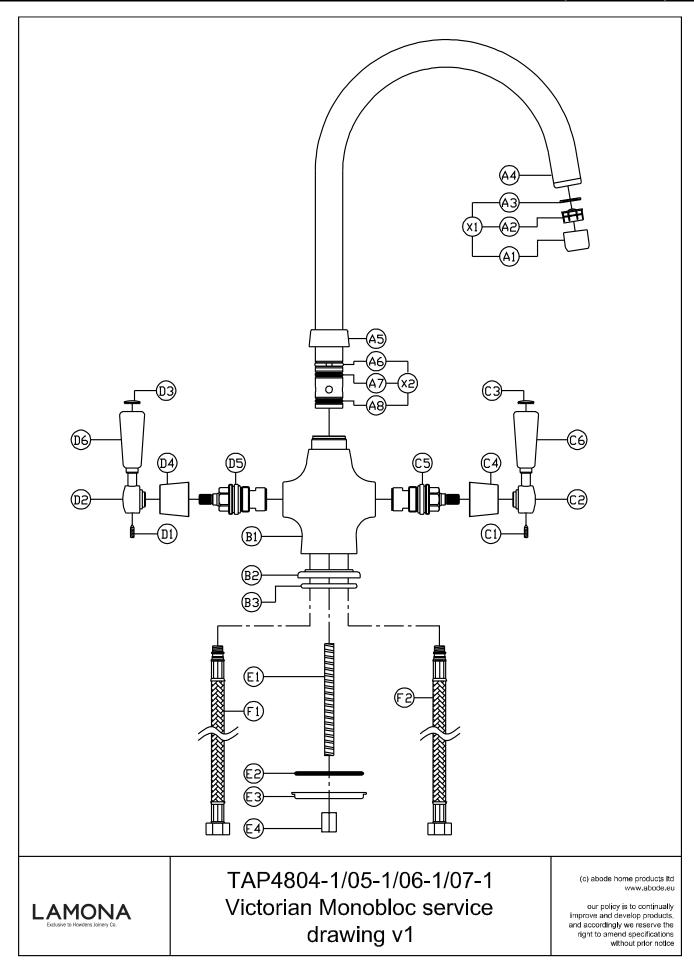

TAP4804-1/05-1/06-1/07-1 – Victorian Monobloc (Chrome)

General Advice:

- · These instructions are intended as a guide only, if you are in any doubt you should seek the advice of a qualified professional.
- Take care not to mark finished parts with screwdrivers or other tools.
- Use a pair of rubber gloves to get a better grip on decorative hand tight parts.
- Ensure all parts are reassembled tightly.
- After maintenance test that all assemblies are water tight and function correctly.
- Always isolate the hot and cold water supplies before starting any maintenance, once isolated you should drain any residual water from your system.

To replace the hot valve:

- Unscrew the grub screw (D1) using an allen key.
- 2. Pull the handle (D3) horizontally away from the tap body (B1).
- 3. Unscrew the valve cover (D4) from the valve (D5) by hand.
- 4. Holding the tap body (B1) unscrew the valve (D5) using a 17mm ring spanner or adjustable wrench.
- 5. Clean any debris from the chamber in the tap body (B1).
- 6. Reassemble the tap in the reverse order.

To replace the spout o-rings:

- 1. Whilst holding body (B1) unscrew the spout locking collar (A5)
- 2. Pull the spout (A4) vertically away from the body (B1).
- 3. Remove the old o-rings (A7 & A8) using a small screwdriver or similar.
- 4. If worn, remove the white PTFE spacer (A6).
- 5. Ensure the inside of the body (B1) and the spout base (A4) is clean of dirt and grit with a soft wet cloth.
- 6. If required locate the new white PTFE spacer (A6).
- 7. Carefully locate the new O-rings (A7 & A8) onto the spout base (A4).
- 8. Grease the O-rings (A7 & A8) thoroughly with silicone or alternative similar grease.
- 9. Reassemble the tap in the reverse order.