


TAP9003 – Monobloc tap

Key:	Description:	APX size (mm):	Base material	Colour:	QTY:
A1	Spout	295 x 115	Brass	Chrome	1
A2	Spout locking collar	32 x 13	Brass	Chrome	1
A3	Anti friction split ring	3 x 23 OD	Plastic	White	1
A4	O-ring	3 x 23 OD	Rubber	Black	1
A5	O-ring	3 x 23 OD	Rubber	Black	1
B1	Body	88 x 40	Brass	Chrome	1
C1	Dust cap	36 x 8	Plastic	Chrome	1
C2	Handle screw	M5 x 12	Brass	Brass	1
C3	Hot indice	39 x 7	Plastic	Red	1
C4	Handle	34 x 47	Mazak	Chrome	1
C5	Hot valve	½" comp. valve x 50	Brass	Brass	1
D1	Dust cap	36 x 8	Plastic	Chrome	1
D2	Handle screw	M5 x 12	Brass	Brass	1
D3	Cold indice	39 x 7	Plastic	Red	1
D4	Handle	34 x 47	Mazak	Chrome	1
D5	Cold valve	½" comp. valve x 50	Brass	Brass	1
E1	Fixing stud	M8 x 70	Steel	Silver	1
E2	Upper gasket	42 x 1.5	Rubber	Black	1
E3	Horseshoe gasket	45 OD	Rubber	Black	1
E4	Fixing horseshoe	51 x 5	Steel	Silver	1
E5	Fixing nut	18 x 11 AF	Brass	Brass	1
F1	Hot tail pipe	245 x 15 x M12	Copper	Copper	1
F2	Cold tail pipe	245 x 15 x M12	Copper	Copper	1
X1	Complete Spout	N/A	N/A	N/A	1
X2	Hot dust cap, screw and indice	N/A	N/A	N/A	1
X3	Complete cold handle	N/A	N/A	N/A	1
X4	Cold dust cap, screw and indice	N/A	N/A	N/A	1
X5	Complete hot handle	N/A	N/A	N/A	1
X6	Complete fixing kit	N/A	N/A	N/A	1

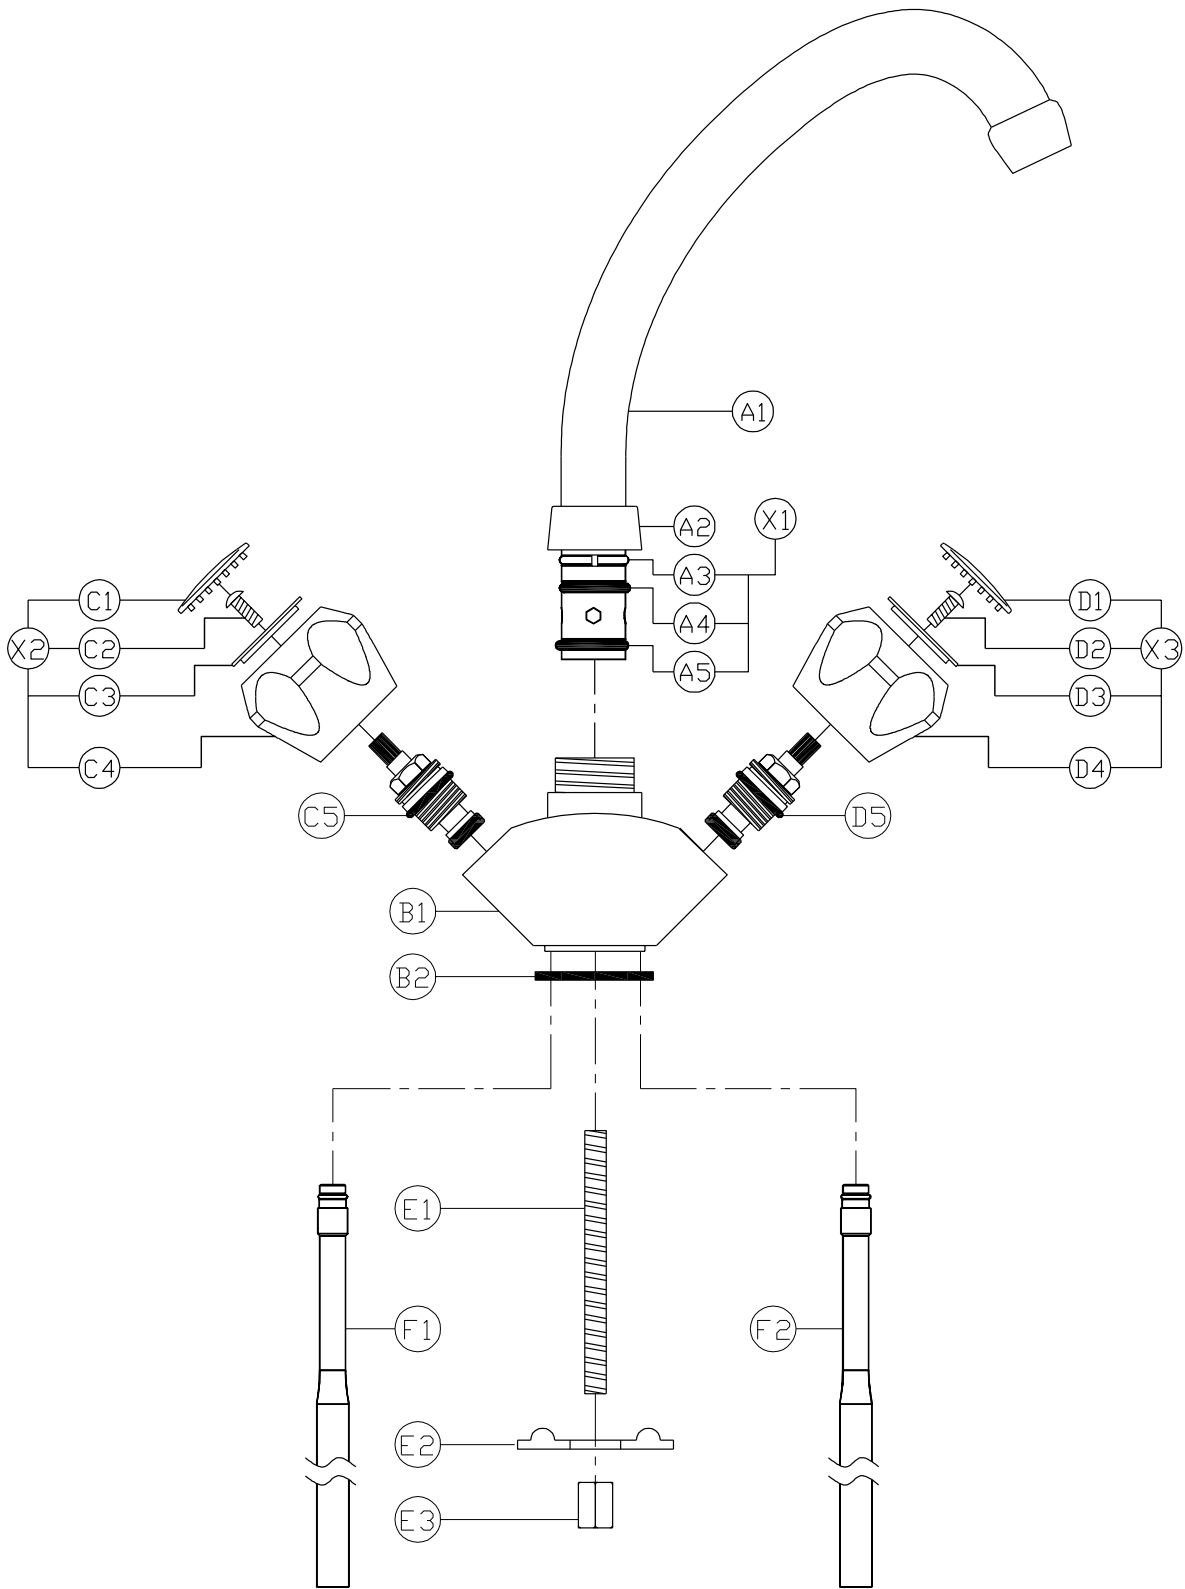

TAP9003 - Monobloc service drawing v3

(c) abode home products ltd
www.abode.eu

our policy is to continually
improve and develop products,
and accordingly we reserve the
right to amend specifications
without prior notice

General Advice:

- These instructions are intended as a guide only, if you are in any doubt you should seek the advice of a qualified professional.
- Take care not to mark finished parts with screwdrivers or other tools.
- Use a pair of rubber gloves to get a better grip on decorative hand tight parts.
- Ensure all parts are reassembled tightly.
- After maintenance test that all assemblies are water tight and function correctly.
- Always isolate the hot and cold water supplies before starting any maintenance, once isolated you should drain any residual water from your system.

To replace the hot valve:

1. Lever out the dust cap (C1) using a small precision screwdriver or fingernail.
2. Unscrew the crosshead screw (C2)
3. Pull the handle (C3) away from the tap body.
4. Holding the tap body (B1) unscrew the valve (C5) using a 17mm ring spanner or adjustable wrench.
5. Clean any debris from the chamber in the tap body (B1).
6. Reassemble the tap in the reverse order.

To replace the spout o-rings:

1. Whilst holding body (B1) unscrew the spout locking collar (A2)
2. Pull the spout (A1) vertically away from the body (B1).
3. Remove the old o-rings (A4 & A5) using a small screwdriver or similar.
4. If worn, remove the white PTFE spacer (A3).
5. Ensure the inside of the body (B1) and the spout base (X2) is clean of dirt and grit with a soft wet cloth.
6. If required locate the new white PTFE spacer (A3).
7. Carefully locate the new O-rings (A4 & A5) onto the spout base (X2).
8. Grease the O-rings (A4 & A5) thoroughly with silicone or alternative similar grease.
9. Reassemble the tap in the reverse order.