


# TAP4132 – Orta Swan Neck Monobloc

Key:	Description:	APX size (mm):	Base material:	Colour:	QTY:
A1	Aerator housing	M22 F	Brass	Chrome	1
A2	Aerator	Neoperl Honeycomb	Plastic	Blue/Grey	1
A3	Rubber gasket	21 OD	Rubber	Black	1
A4	Spout	295 x 210	Brass	Chrome	1
A5	Spout locking collar	32 x 13	Brass	Chrome	1
A6	Anti friction split ring	23 OD	Plastic	White	1
A7	O-ring	22 OD x 1	Rubber	Black	1
A8	O-ring	22 OD x 1	Rubber	Black	1
B1	Tap body	110 x 50	Brass	Chrome	1
B2	Upper seal	46 OD x 3	Foam	Black	1
C1	Handle	60 x 35	Brass	Chrome	1
C2	Grub screw	M5 x 4	Steel	Silver	1
C3	Valve cover	28 x 23	Brass	Chrome	1
C4	Cold compression valve	50 x 24	Brass	Brass	1
D1	Handle	60 x 35	Brass	Chrome	1
D2	Grub screw	M5 x 4	Steel	Silver	1
D3	Valve cover	28 x 23	Brass	Chrome	1
D4	Hot compression valve	50 x 24	Brass	Brass	1
E1	Fixing stud	M8 x 95	Steel	Silver	1
E2	Lower gasket	44 x 4	Rubber	Black	1
E3	Metal horseshoe	51 x 5	Steel	Silver	1
E4	Fixing nut	11 AF x 18	Brass	Brass	1
F1	Hot inlet pipe	245 x 15 x M12	Copper	Copper	1
F2	Cold inlet pipe	245 x 15 x M12	Copper	Copper	1
X1	Aerator assembly	N/A	N/A	N/A	1
X2	Spout base assembly	N/A	N/A	N/A	1
X3	Fixing kit assembly	N/A	N/A	N/A	1

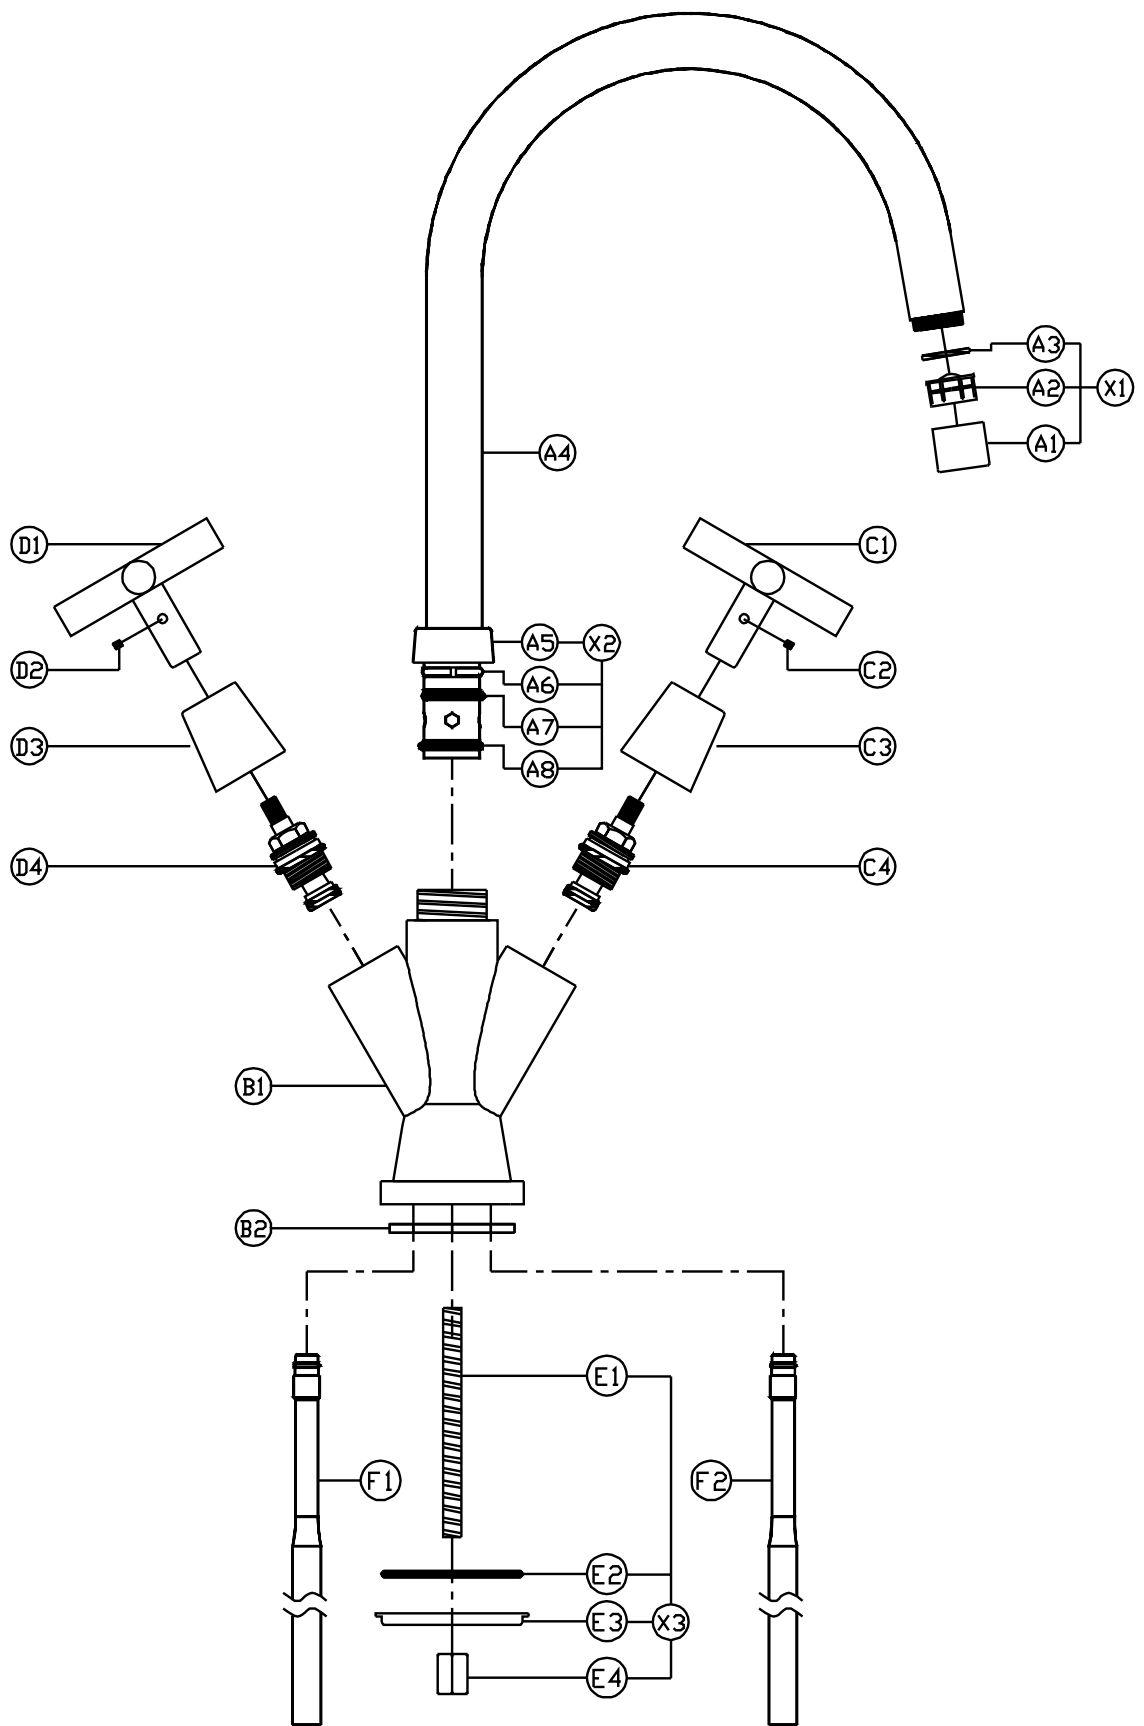

TAP 4132 - orta monobloc  
service drawing v1

(c) abode home products ltd  
www.abode.eu

our policy is to continually  
improve and develop products,  
and accordingly we reserve the  
right to amend specifications  
without prior notice

**General Advice:**

- These instructions are intended as a guide only, if you are in any doubt you should seek the advice of a qualified professional.
- Take care not to mark finished parts with screwdrivers or other tools.
- Use a pair of rubber gloves to get a better grip on decorative hand tight parts.
- Ensure all parts are reassembled tightly.
- After maintenance test that all assemblies are water tight and function correctly.
- Always isolate the hot and cold water supplies before starting any maintenance, once isolated you should drain any residual water from your system.

**To replace the hot valve:**

1. Loosen grub screw (D2) using a 2.5mm A/F Allen key.
2. Pull the handle (D1) away from the tap body.
3. Unscrew the decorative valve cover (D3).
4. Holding the tap body (B1) unscrew the valve (D4) using a 17mm ring spanner or adjustable wrench.
5. Clean any debris from the chamber in the tap body (B1).
6. Reassemble the tap in the reverse order.

**To replace the spout o-rings:**

1. Whilst holding body (B1) unscrew the spout locking collar (A5)
2. Pull the spout (A4) vertically away from the body (B1).
3. Remove the old o-rings (A7 & A8) using a small screwdriver or similar.
4. If worn, remove the white PTFE spacer (A6).
5. Ensure the inside of the body (B1) and the spout base (A4) is clean of dirt and grit with a soft wet cloth.
6. If required locate the new white PTFE spacer (A6).
7. Carefully locate the new O-rings (A7 & A8) onto the spout base (A4).
8. Grease the O-rings (A7 & A8) thoroughly with silicone or alternative similar grease.
9. Reassemble the tap in the reverse order.